

User instructions

Electronic programmer

EN





Thank you for choosing one of our products. From now on cooking will be a creative pleasure with your new oven.

The individual paragraphs are designed to give a step by step description of all of the oven's functions. The clear and easy to understand text is accompanied by detailed images and widely used symbols.

Reading this manual in depth will provide you will the answers to any questions that may arise regarding the correct use of your new oven.

This user's manual is an integral part of the product purchased. The user must conserve the manual correctly so that it is always available for consultation during the use and maintenance of the product. Keep this user's manual for future reference. If the product is resold, the manual must be transferred to any subsequent owner or user of the product.

The manufacturer is not liable for any inaccuracies in this booklet resulting from printing or transcription errors. The manufacturer reserves the right to modify its products as it considers necessary or in the interests of the user, without compromising their essential safety and operating characteristics.

• FIRST POWER-ON (OR FOLLOWING A POWER SHUTDOWN).....	4
• “STANDBY” MODE	4
• ELECTRONIC PROGRAMMER MAIN MENU.....	5
1. “MANUAL” COOKING MODE	6
1.1 Description of the knobs and the MANUAL cooking programming screen	6
1.2 Using the MANUAL cooking programming screen	7
a) Icon 	7
b) FUNCTION icon [from F1 to F9]	7
c) TARGET TEMPERATURE	7
d) INTERNAL TEMPERATURE	8
e) LIGHT icon  (ON/OFF)	8
e) AIR FRY icon  (ON/OFF)	9
f) DELAYED START icon 	10
g) TIMER icon 	11
h) CORE PROBE icon  (in some models)	12
i) MINUTE MINDER icon 	13
① Clock	13
1.3 Using the start COOKING screen	13
1.4 Using the MINUTE MINDER icon  on the start COOKING screen	14
1.5 Using the cooking start screen with MEAT PROBE IN and temperature adjustment (in some models)	15
1.6 Using the MINUTE MINDER icon  on the MEAT PROBE IN screen (in some models)	16
2. “ECO” COOKING MODE.....	19
2.1 Using the ECO / TARGET TEMPERATURE screen.....	19
2.2 Using the start ECO-COOKING screen.....	20
2.3 Using the MINUTE MINDER icon  on the start ECO-COOKING screen.....	21
3. “AUTOMATIC” COOKING MODE (COMBI-STEAM OVEN / ASCOT AND GENESI)	22
3.1 Using the first photo menu, food “categories”	22
3.2 Using the second photo menu, preset “recipes” with “recipe card”	23
3.2.1 Using RISE mode in DESSERTS BREAD / PIZZA “categories”	24
3.2.2 Using the THIN PIZZA “recipe” in the BREAD / PIZZA “category”	26
3.3 Using the preset “recipe” cooking programming screen	27
3.4 Using the start AUTO-COOKING screen.....	28
3.5 Using the STEAM-CLEANING FUNCTION	29
4. “SHABBAT” COOKING MODE (COMBI-STEAM OVEN)	30
4.1 Using the SHABBAT / TARGET TEMPERATURE screen.....	30
4.2 Using the start SHABBAT-COOKING screen.....	31
4.3 Using the MINUTE MINDER icon  on the start SHABBAT-COOKING screen	32
5. “SETUP” MODE.....	33
5.1 Using the menu items on the SETUP screen	33
5.1.1 “TIME”	33
5.1.2 “LANGUAGE”	34
5.1.3 “DISPLAY BRIGHTNESS”	34
5.1.4 “SOUND”	35
5.1.5 “SOFTWARE VERSION”	35
5.1.6 “DEMO MODE”	36
5.2 “Standby” mode	36
6. “MINUTE MINDER TIMER” MODE (INDIPENDENT)	37
6.1 Using the MINUTE MINDER screen.....	37




• FIRST POWER-ON (OR FOLLOWING A POWER SHUTDOWN)

The **SOFTWARE VERSION** screen is **not active for the user** and can only be used by the technician.

► Procedure **not** guided by the programmer:

- the programmer displays the **SOFTWARE VERSION** screen, after approximately **3 minutes** this is automatically replaced by the **main menu** screen.

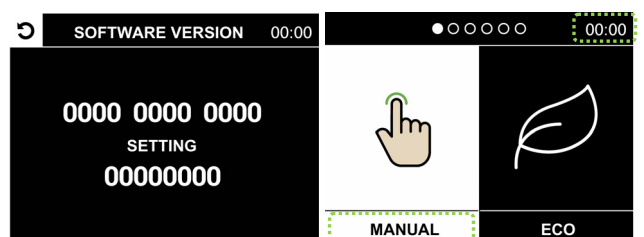

To browse the **main menu** see the instructions on [page 5](#)

To set the **language** and **current time**, follow the instructions on [page 33](#)

► Procedure **guided** by the programmer, setting the **language** and **current time** (to **exit** the screen more quickly and start using your oven):


- the programmer displays the **SOFTWARE VERSION** screen*

press the **control knob** (fig. 1) to display the **LANGUAGE** screen; turn the **control knob** several clicks **to the right** to **illuminate** one of the **items** in the desired language. Then **press** the knob **to confirm** the illuminated **item** (white background, fig. 2).



- the programmer displays the **TIME** screen in the previously set **language**,

the “**HOURS/h**” field is already active (white background, fig. 3) and can be **set** by turning the **control knob** several clicks **to the right or left** to increase or decrease the **value**; **press** the knob to switch to the “**MINUTES/m**” field (fig. 4) to set the **value** as described above. **Press** the knob **to confirm**. The **main menu** screen displays with the set **current time** visible in the top right corner of the programmer display (example in fig. 5). To browse the **main menu** see the instructions on [page 5](#)

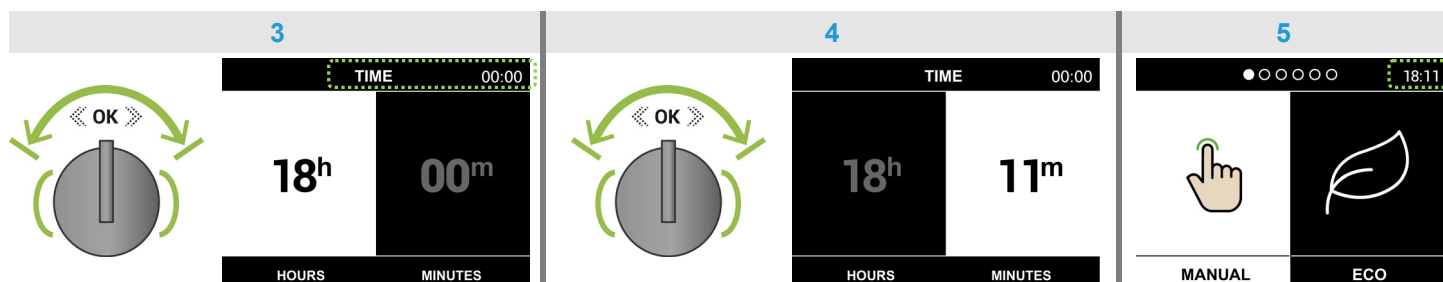

Note: after approximately **3 minutes** of inactivity, the **steel** logo will be displayed (see [page 36](#)).


• “STANDBY” MODE

► See section [5.2](#) [page 36](#)




• ELECTRONIC PROGRAMMER MAIN MENU


Browse the **main menu** by clicking the **control knob** several times **to the right or left** (fig. 1). The **illuminated field** (white background) indicates the **selected mode** (example in fig. 2); **press the control knob** to enter the selected **mode** (fig. 3).

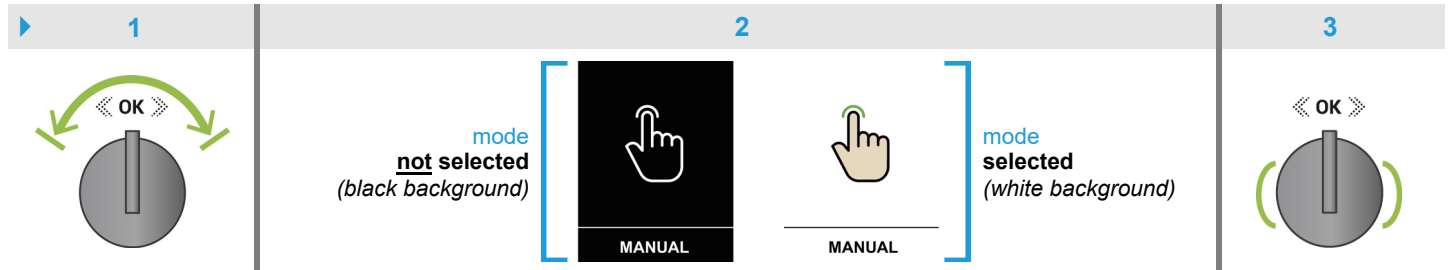

COMBI-STEAM OVEN | 6 modes

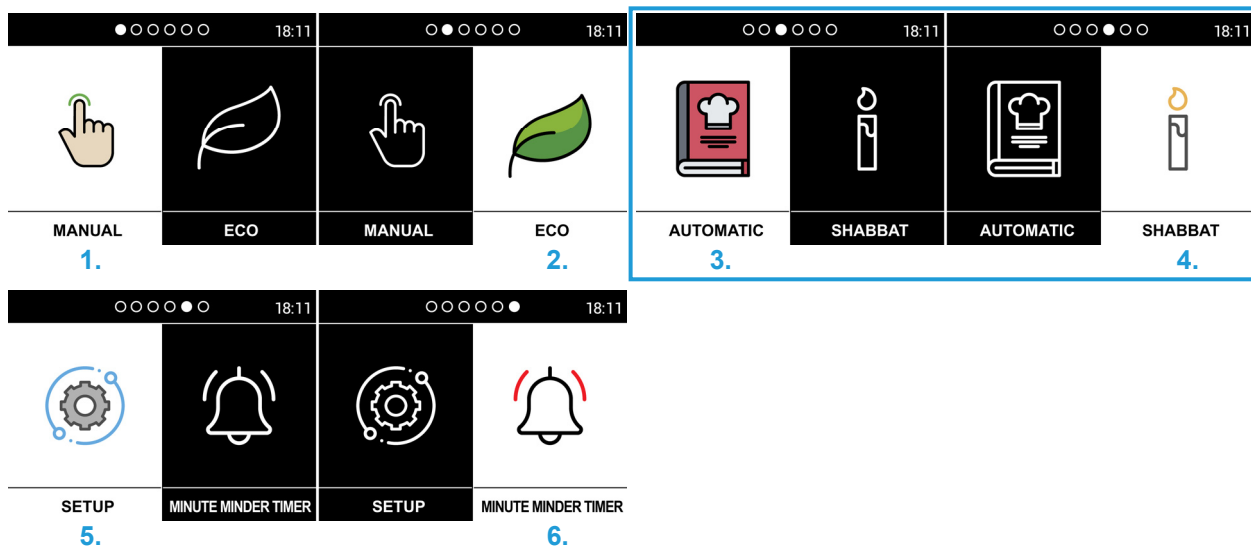

MULTIFUNCTION OVEN | 4 modes

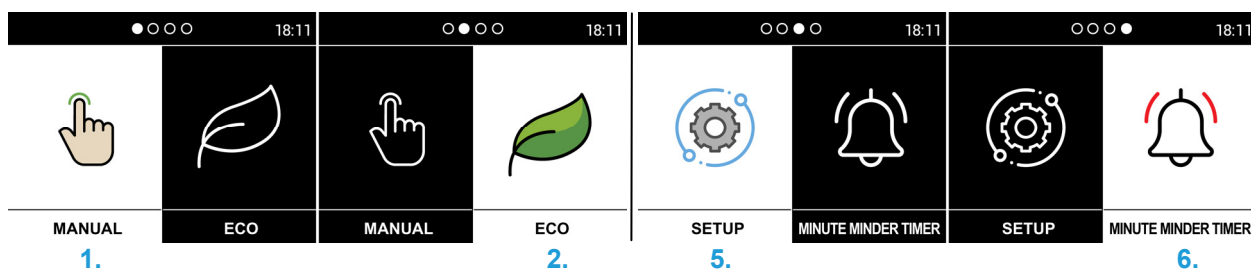

1. "MANUAL" cooking **mode**: to **set** the desired cooking parameters ▶ [page 6](#)
2. "ECO" cooking **mode**: recommended for **heating food gradually** ▶ [page 19](#)
3. "AUTOMATIC" cooking **mode** (Ascot / Genesi): for using preset "recipes" ▶ [page 22](#)
4. "SHABBAT" cooking **mode**: recommended when cooking for **over 24 hours** at a temperature of **60°C/100°C** ▶ [page 30](#)
5. "SETUP" **mode**: for setting the **current time**, the desired display **language**, the display **brightness** and the beeper **volume** ▶ [page 33](#)
6. "MINUTE MINDER TIMER" **mode**: with beeper **without interfering** with the oven ▶ [page 37](#)



1. "MANUAL" COOKING MODE




MANUAL

To enter "MANUAL" mode, go to the **main menu** and proceed as follows:

- turn the **control knob** several clicks *to the right or left* until "MANUAL" is **illuminated** (white background, as shown in the adjacent figure);
- turn the **function knob [F]** to access the screen for **programming** **MANUAL** cooking. Then **select** the desired FUNCTION from 1 to 9 [F1/F9];
 - ▶ follow the instructions in sections 1.1, 1.2, 1.3, 1.4, 1.5, 1.6 to **set** the parameters in the relative screens.

1.1 Description of the knobs and the **MANUAL** cooking programming screen

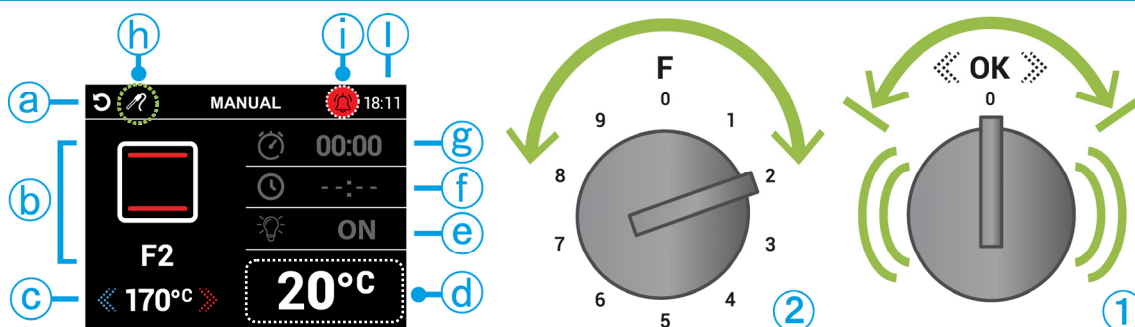

The **control knob** [OK] is used in the 3 following ways:

- turn several clicks *to the right or left* { to **browse** the 6 modes in the **main menu** and the 2 menus in "AUTOMATIC" mode; to **illuminate** the menu items in the **SETUP** screen and to **set** oven parameters in the **MANUAL** **ECO** **SHABBAT** **COOKING** **SETUP** **MINUTE MINDER** screens }
▶ see the contents on page 3
- **press** { to **enter** the **main menu** modes and menu items in the **SETUP** screen; to **illuminate/select** the oven parameters in the **MANUAL** **COOKING** screens; to **choose** the "category/recipe" and **read** the "recipe card" in "AUTOMATIC" mode and **to confirm** }
- **press for at least 2 seconds** { to **start** the type of cooking set for the food }
▶ sections 1.3, 1.5, 2.2, 3.4, 4.2



- ② Turn the **function knob [F]** *clockwise or anticlockwise* to **select** the desired FUNCTION; the display (e.g. ref. ⑥) shows the relative icon [from F1 to F9] ▶ see page 7

- ① Icon is for **returning** to the **main menu** ▶ see page 7

- ⑥ Indicates the icon [from F1 to F9] of the FUNCTION **selected** using the **function knob [F]** ▶ see table on page 17/18

- ⑦ Indicates the **preset** TARGET TEMPERATURE ▶ see page 7 for how to **change** it for example to 180°C

- ⑧ Indicates the oven's INTERNAL TEMPERATURE (**appears** on the **start** **COOKING** screen) ▶ see page 8

- ⑨ The LIGHT icon is for turning the oven **light** **ON** or **OFF** ▶ instructions on page 8

The AIR FRY icon is **available** using FUNCTION 8 [F8] ▶ see instructions on page 9 and table on page 18

- ⑩ The DELAYED START icon is for programming the **cooking start time** ▶ instructions on page 10

- ⑪ The TIMER icon is for programming the **cooking duration** ▶ instructions on page 11

- ⑫ The CORE PROBE icon **appears** when the jack plug is inserted into the socket ▶ instructions on page 12

- ⑬ The MINUTE MINDER icon **appears** on the **start** **COOKING** screen ▶ page 14 or on the **MEAT PROBE IN** screen ▶ page 16

- ⑭ The clock indicates the **current time** ▶ see how to set it on page 33




1.2 Using the **MANUAL** cooking programming screen

a) Icon

This icon is used to return to the **main menu**, see the example of the **MANUAL** cooking programming screen [F2]* in the figures below.


Press the **control knob** to illuminate the icon (fig. 1), to select the icon (and illuminate it turn the knob **3 clicks to the left** then **press** the knob again to return to the **main menu** (fig. 2).

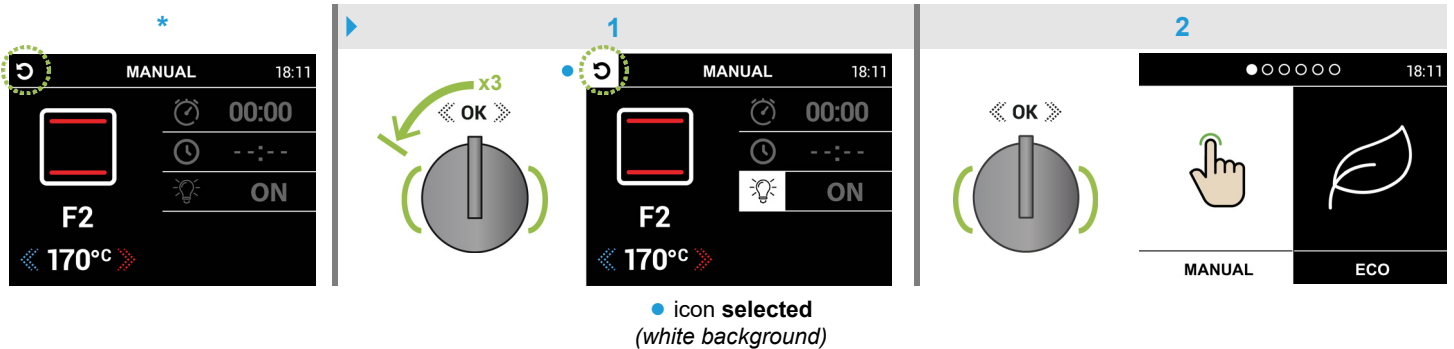

b) FUNCTION icon [from F1 to F9]

This icon indicates the FUNCTION **selected** using the **function knob [F]**; it allows you to choose the type of heating most suited to your cooking requirements ▶ see table on [page 17/18](#)

On turning the **function knob [F]** **clockwise or anticlockwise**, the displayed icon (and the relative parameters) **changes** to the FUNCTION being **selected**.

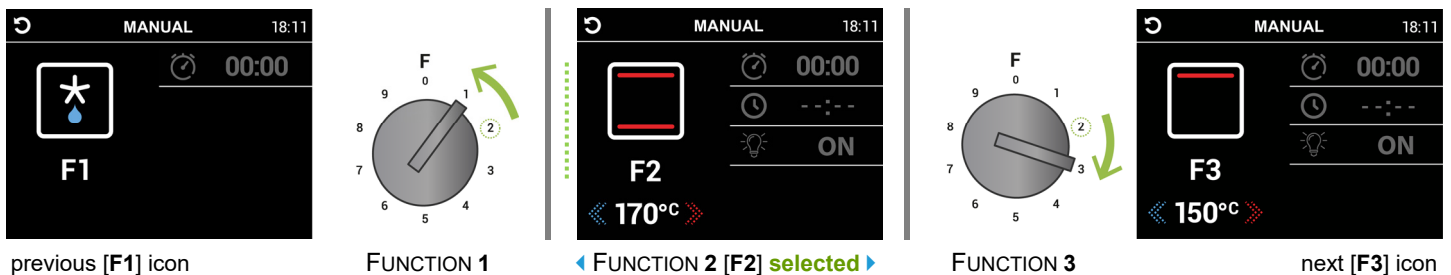


c) TARGET TEMPERATURE

This value indicates the desired temperature; each FUNCTION from 2 to 9 [F2/F9] has a preset TARGET TEMPERATURE indicating the suggested temperature for that specific FUNCTION.

After **selecting** a FUNCTION (section b), the TARGET TEMPERATURE can be **changed** (the field is already active in the **MANUAL** cooking programming and **start COOKING** screens) by **clicking the control knob to the right or left** to increase or decrease the **value**.

The temperature is shown in **white** while it is being **changed** and when the oven **has not yet reached** the temperature (**COOKING** screen, fig. 1); it changes **green** (example in fig. 2) when the oven's INTERNAL TEMPERATURE **reaches** the TARGET TEMPERATURE (a **beeper** sounds).

▶ Also see section d) [page 8](#)

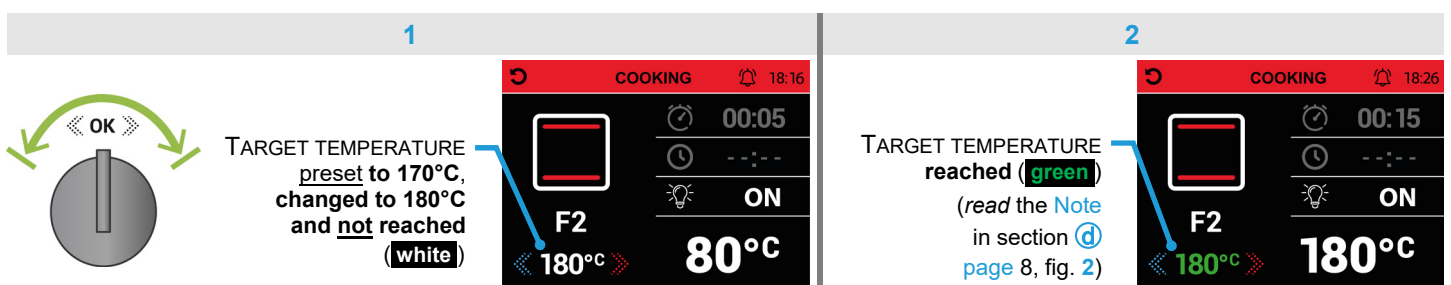





d INTERNAL TEMPERATURE

This value indicates the temperature detected inside the oven (appears on the **start COOKING** screen).

After **selecting** a FUNCTION (section **b** page 7) and changing the TARGET TEMPERATURE if necessary (section **c** page 7), the thermostat does not start detecting the temperature before starting cooking (**MANUAL** screen, fig. 1); the value **increases** as the oven's INTERNAL TEMPERATURE rises **until it matches** the TARGET TEMPERATURE (e.g. fig. 2).

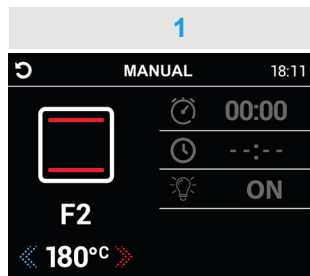

• value not detected

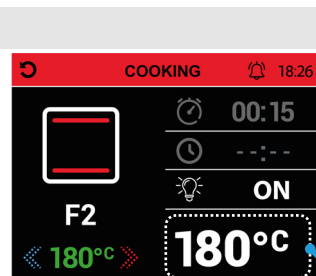

Note: to ensure uniform heating of the oven chamber, each FUNCTION manages the temperatures with different parameters.

► **By changing** FUNCTION, **during cooking**, the INTERNAL TEMPERATURE detected by the thermostat may **flash** (a beeper sounds for a few seconds) until the oven chamber is thermally stabilized; a temporary oscillation is considered normal.





the INTERNAL TEMPERATURE of 180°C **matches** the TARGET TEMPERATURE (**green**) (a beeper sounds)

e LIGHT icon (ON/OFF)

► **Procedure** to be followed (fig. 1/4) also in "AUTOMATIC" mode (**programming cooking** section 3.3 page 27 and **start AUTO-COOKING** section 3.4 page 28).






The oven light is set to **switch on automatically (ON*)** when the door is opened and **while cooking**. This icon can be used to **switch the light (OFF) before** the oven is switched on (*useful when using DELAYED START* ).

After **selecting** a FUNCTION (section **b** page 7), **press** the **control knob 2 consecutive times** to **enter** the LIGHT **settings** (the icon  and the selection field **illuminate**, fig. 1). Then turn the knob **1 click to the right** to set light **OFF** when the oven starts (fig. 2).

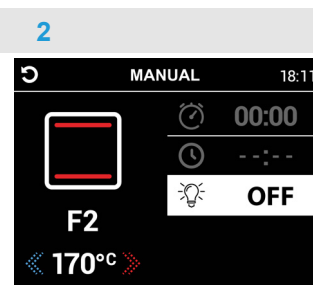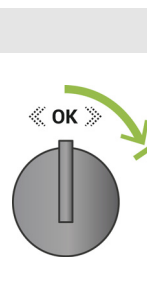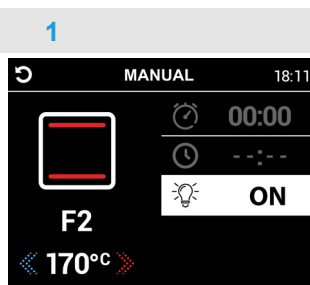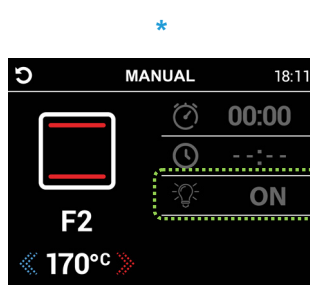

Press the **control knob** to **confirm** and exit the selection field (**OFF**, black background, fig. 3), then turn the knob **1 click to the right** (fig. 4) to **exit** the setting and **avoid** entering the TARGET TEMPERATURE modification field.

Note ► after **programming** DELAYED START  (section **f** page 10) or **activating** the **start COOKING** screen (section 1.3 page 13), the oven light will be **OFF** (fig. 5).

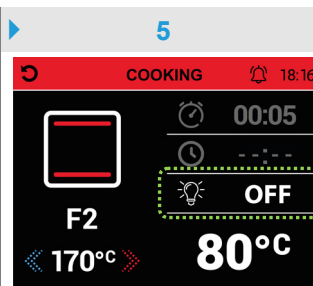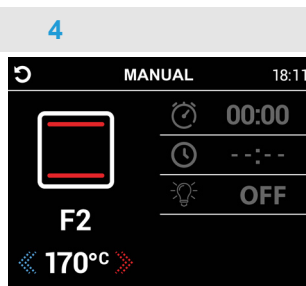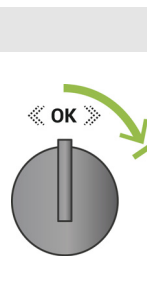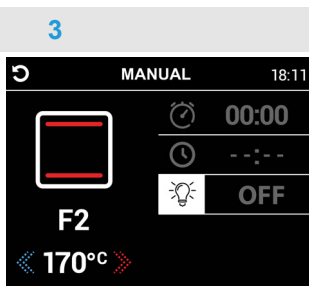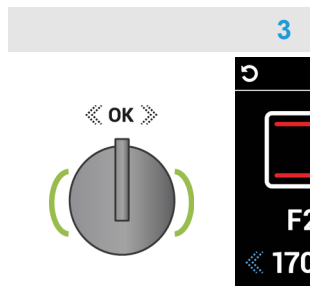


Note: the LIGHT **settings** (ON/OFF) can also be accessed at any time from the **start COOKING** screen as *described* above.



Ⓔ AIR FRY icon (ON/OFF) WHEN AVAILABLE

This icon is used to access the AIR FRY function (only in “MANUAL” mode).


After selecting FUNCTION 8 [F8]* (section Ⓒ page 7), press the control knob 2 consecutive times to enter the AIR FRY function (the icon  and the selection field illuminate, fig. 1). Then turn the knob 1 click to the right to activate the function when the oven starts (ON, fig. 2).

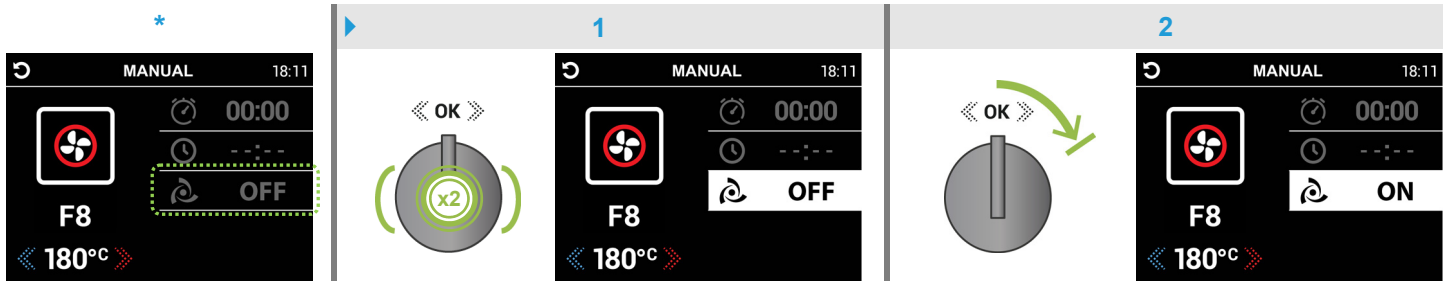

Press the control knob to confirm and exit the selection field (ON, black background, fig. 3), then turn the knob 1 click to the right (fig. 4) to exit the function and avoid entering the TARGET TEMPERATURE** modification field.

Note: to set the TIMER  (cooking duration) as well see section Ⓖ page 11

Note ▶ after programming DELAYED START  (section Ⓕ page 10) or activating the start COOKING screen (section 1.3 page 13), the icon  is displayed with the function activated (ON, fig. 5).

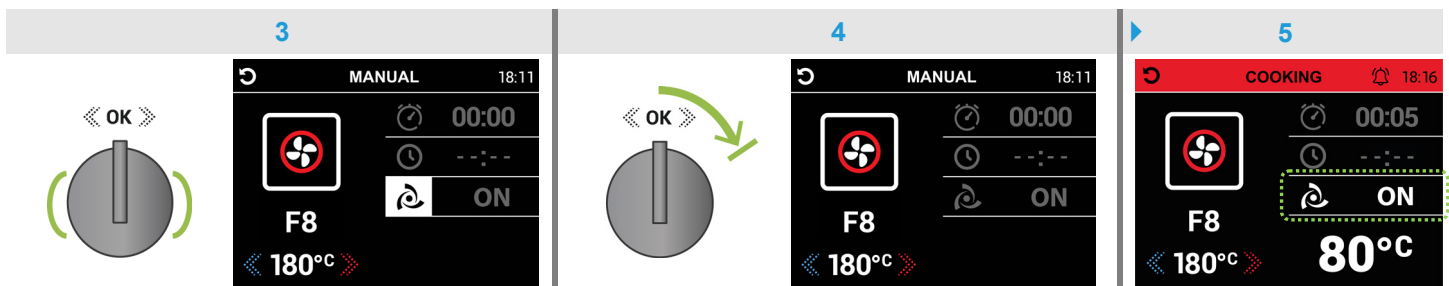

****Note:** to change the TARGET TEMPERATURE (between 180°C and 220°C) see section Ⓒ page 7

Note ▶ see FUNCTION 8 [F8] “RECOMMENDED USE” in the table on page 18

Cooking times: Cooking times may vary depending on the quantity, thickness, and moisture content of the food. It's recommended to check the cooking time a few minutes before the time indicated in the recipes; see indicative examples in the table below.

NUGGETS	POTATOES	CARROTS AND COURGETTES	CUTTLEFISH	SHRIMP
				
TEMPERATURE 200°C	TEMPERATURE 200°C	TEMPERATURE 190°C	TEMPERATURE 190°C	TEMPERATURE 190°C
TIME (MIN.) 19	TIME (MIN.) 30	TIME (MIN.) 31	TIME (MIN.) 18	TIME (MIN.) 10




f DELAYED START icon

► Procedure to be followed (fig. 1/7) also in “AUTOMATIC” mode (programming cooking, section 3.3 page 27).


This icon is for programming the cooking start time (within 24 hours) with the oven **switching on automatically**.

After **selecting** a FUNCTION (section b page 7, table page 17), **press** the **control knob** to illuminate the icon (fig. 1); to select the icon (and illuminate it , fig. 2), turn the knob **1 click to the left** then **press** the knob to access the DELAYED START settings (the selection field **illuminates** with the automatic current time setting, **example** in fig. 3).

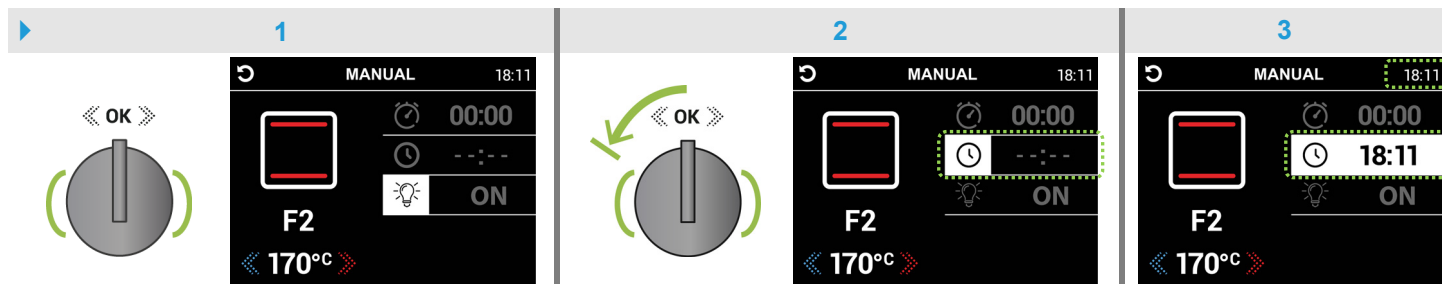


Turn the **control knob** several clicks **to the right or left** to set the desired **cooking start time** (**example** in fig. 4). Then **press** the knob to **confirm** and exit the selection field (black background, fig. 5). Finally, turn the knob **2 clicks to the right** (fig. 6) to **exit** the settings (and the icon illuminated in sequence) to **avoid** entering the TARGET TEMPERATURE modification field.


Note: to set the TIMER (cooking duration) as well see section g page 11

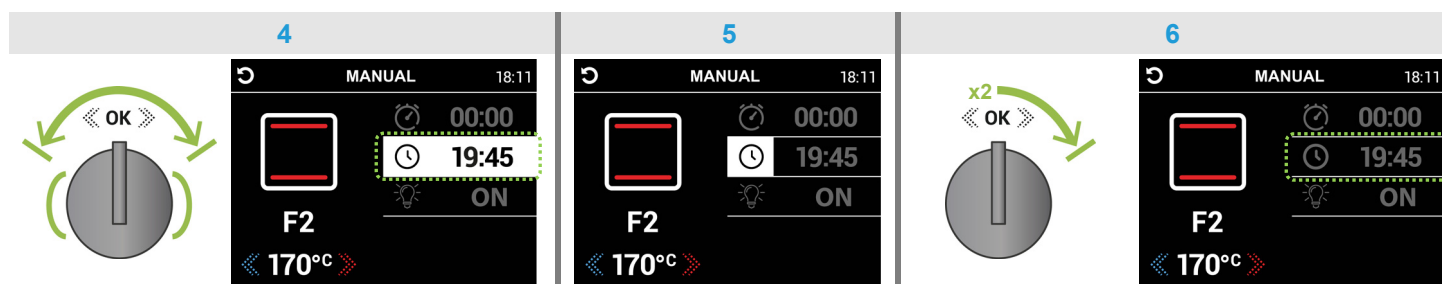

Pressing the **control knob** **for at least 2 seconds**, the logo is displayed (fig. 7) with the programmed time **flashing**. **Note** ► at the envisaged time the **start COOKING** screen **automatically** activates (fig. 8), which will **switch on** the oven (section 1.3 page 13).

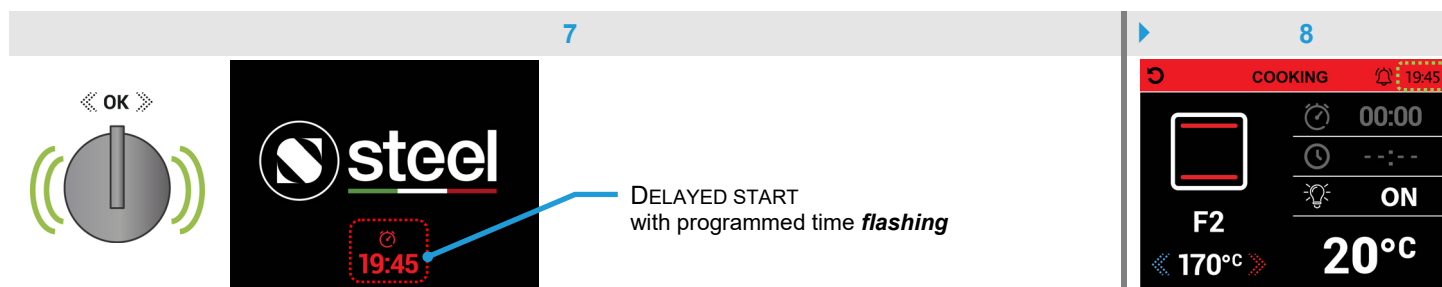

Note: the programmed time can be **cancelled** by **pressing** the **control knob*** to enter the **MANUAL** screen; to **reprogramme** the cooking start time **go to** the DELAYED START settings as described above (the example below shows a time from the day after, fig. 7a ► 8b).

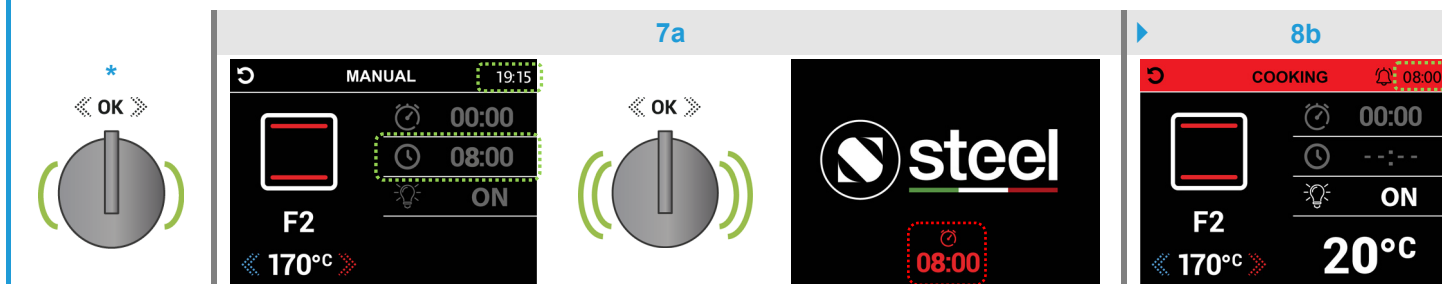




TIMER icon

► Procedure to be followed also in “AUTOMATIC” mode (fig. 1/5 for the **programming cooking** screen in section 3.3 page 27 ; read the **Note** in fig. 6* for the **start AUTO-COOKING** screen in section 3.4 page 28) to change the preset “recipe”.


This icon is for programming the cooking duration (with a countdown, beeper and **automatic** oven **shutdown**).

After **selecting** a FUNCTION (section **b** page 7, table page 17), **press** the **control knob** to illuminate  the icon  (fig. 1). To select the icon  (and illuminate it ) , turn the knob **2 clicks to the left** then **press** the knob **again** to access the **TIMER settings** (the selection field **illuminates**, fig. 2); **click the control knob to the right or left** to set the desired **cooking duration** (example in fig. 3).

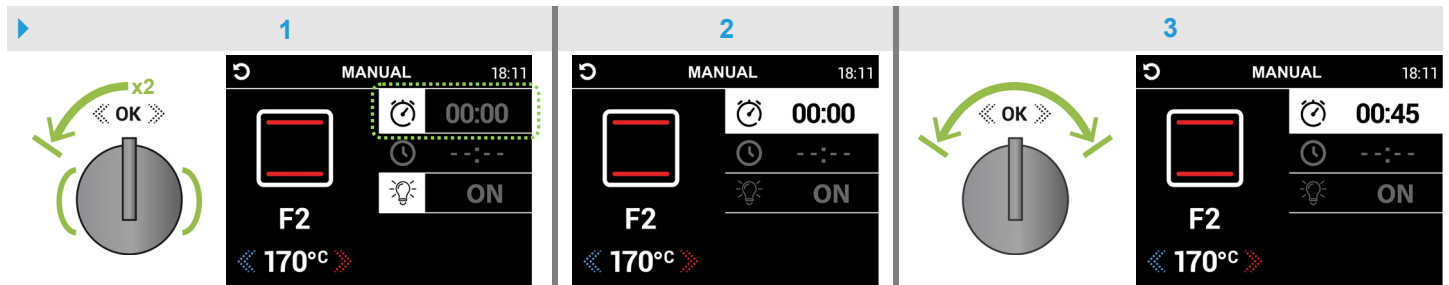

Press the **control knob** to confirm and exit the selection field (black background, fig. 4), then turn the knob **3 clicks to the right** (fig. 5) **to exit** the setting (and the icons   illuminated in sequence) to **avoid** entering the TARGET TEMPERATURE modification field.

Note ► after **programming** DELAYED START  (section **f** page 10) **or** activating the **start COOKING** screen (section 1.3 page 13), the icon  displays with the cooking duration **activated** (fig. 6) and the programmed countdown **begins**.

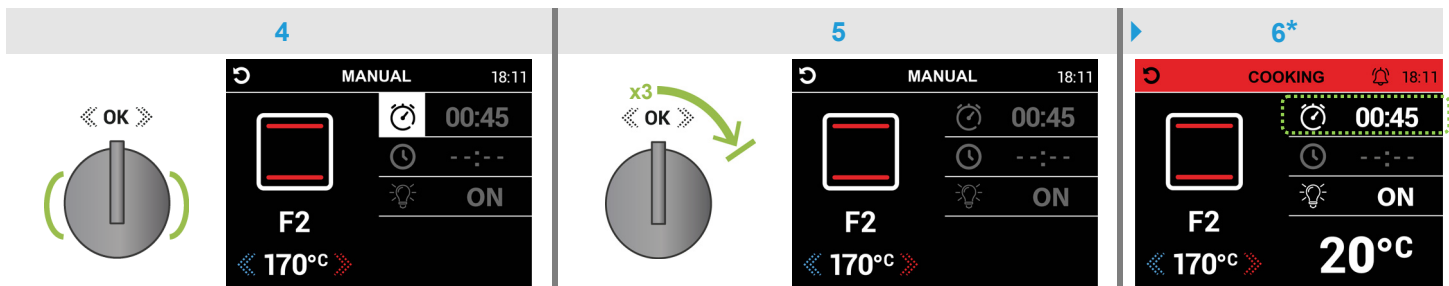

***Note:** in the **start COOKING** screen it is possible to enter the **TIMER settings** to **programme**  **or reprogramme**  the cooking duration as described above. However in this screen the icon  **is not active in the sequence**, so to select icon  **or**  (and illuminate it ) , **press** the knob and turn it **1 click to the left**. **To exit** the settings (and the icon  illuminated in the sequence), turn the knob **2 clicks to the right** to **avoid** entering the TARGET TEMPERATURE adjustment field.


At the **end** of the programmed cooking duration  **00:00**, the **beeper** sounds for approximately **2 minutes**. The oven **switches off automatically**; to silence the beeper, **press** the **control knob** or open the oven door. The **main menu** is once again displayed (page 5).



h CORE PROBE icon (in some models)

This icon indicates that the **jack plug** is inserted into the socket.

Cooking with the CORE PROBE enables the desired **temperature** at the centre of the food to be **set**; it cooks the food to the desired point (blue, rare, medium, well done) and then **switches** the oven **off automatically** (excluding TIMER  with cooking duration).

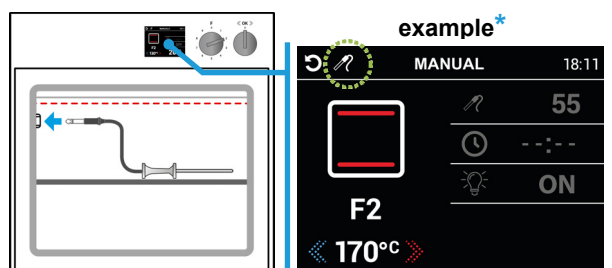

► **Insert the jack plug into the socket** at the top **left** of the oven cavity ( ensuring the cable does **not** come into contact with the **top** heating element) and insert the PROBE into the centre of the food to be cooked.


After **selecting** a FUNCTION (section [b](#) page 7, table [page 17](#)), the icon  **appears** on the programmer display.

***Note:** **only** in this screen is it possible to **set** the LIGHT  **OFF** before the oven is switched on (section [e](#) page 8) and/or **programme** DELAYED START  with the **cooking start time** (to be done last; the  logo will be displayed with the programmed time  flashing, section [f](#) page 10).


To **change** the oven's TARGET TEMPERATURE (the field is already active) see section [c](#) page 7

► The PROBE temperature can already be **changed** (between **40°C** and **95°C****, TARGET 55°C), *useful when using* DELAYED START , by proceeding as shown in the figures below.

Press the **control knob** to illuminate  the icon  (fig. 1); to select the icon  (and illuminate it , fig. 2), turn the knob **2 clicks to the left** then **press** the knob to access the PROBE temperature adjustment (the selection field illuminates, fig. 3).

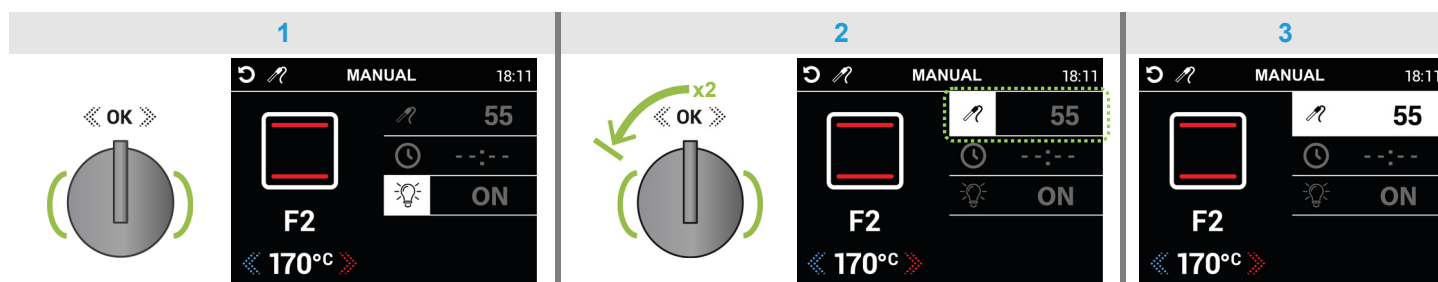

Click the **control knob** to the **right or left** to increase or decrease the **value** (example in fig. 4). Then **press** the knob to confirm and exit the selection field (black background, fig. 5). Finally, turn the knob **3 clicks to the right** (fig. 6) to exit the temperature adjustment (and the icons   illuminated in sequence) and **avoid** entering the TARGET TEMPERATURE modification field.

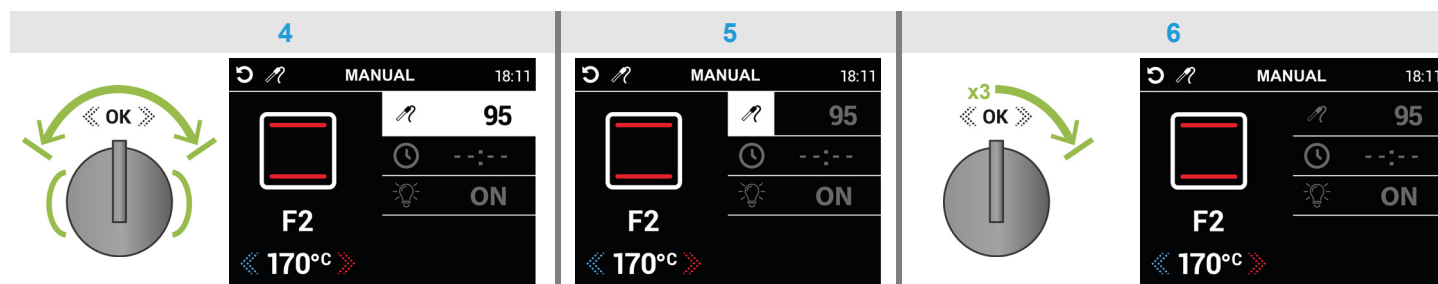

Note ► to **programme** DELAYED START  see section [f](#) page 10 (fig. 1/7) or **start** cooking with the **MEAT PROBE IN** by [proceeding](#) as described in section 1.5 page 15

TYPE OF COOKING	**TEMPERATURE °C	TYPE OF COOKING	**TEMPERATURE °C
BLUE	< 30°C	MEDIUM	64°C - 68°C
RARE	40°C - 50°C	MEDIUM WELL DONE	73°C - 77°C
MEDIUM RARE	56°C - 63°C	WELL DONE	78°C



MINUTE MINDER icon

The icon activates when a timer is **set** in the **start COOKING** screen ▶ instructions in section 1.4 page 14 or **MEAT PROBE IN** screen ▶ instructions in section 1.6 page 16

Clock


The clock indicates the current time and is displayed, **at the top right**, in all screens ▶ to set the time see the instructions on page 33

1.3 Using the start **COOKING** screen

▶ Enter “**MANUAL**” mode and the relative **MANUAL** cooking programming screen as described on page 6


After **selecting** a FUNCTION (section page 7) and changing the TARGET TEMPERATURE if necessary (section page 7), continue by **pressing** the **control knob** for at least 2 seconds to **activate** the **start COOKING** screen (fig. 1), which will **switch on** the oven and start preheating.

Note: when using DELAYED START it will activate automatically at the *envisaged* time (section page 10).

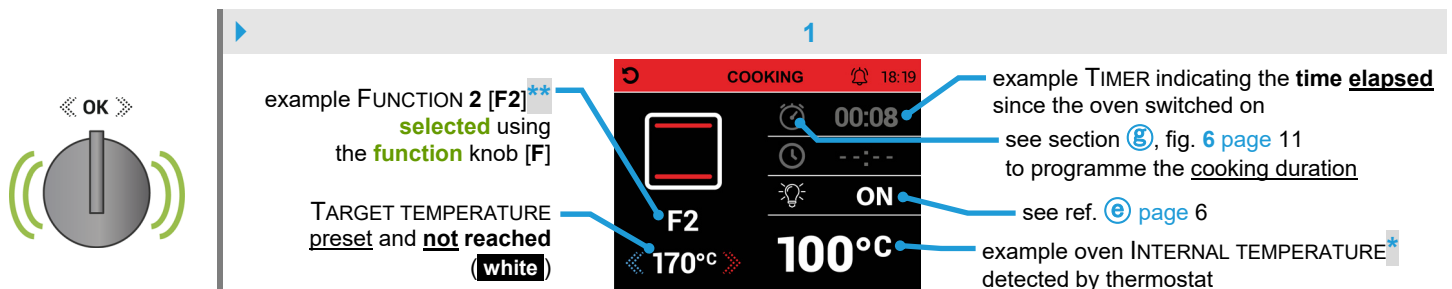

***Note:** the value **increases** as the oven's INTERNAL TEMPERATURE rises **until it matches** the TARGET TEMPERATURE (fig. 2).


****Note:** the FUNCTION can be replaced at any time (table page 17) by turning the **function** knob [F] **clockwise or anticlockwise** (read the **Note** in section page 8). The cooking in progress can be cancelled by turning the **function** knob [F] to FUNCTION 0 (OFF). After approximately **5 seconds** (with the signal sounding) **the oven switches off** and returns to the **main menu**.

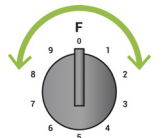


To use the MINUTE MINDER icon or to exit the **start COOKING** screen, see the instructions in section 1.4 page 14

The TARGET TEMPERATURE can also be **changed** during cooking (the field is already active, **example** fig. 2) by **clicking** the **control knob** to the right or left to increase or decrease the **value**.

This value turns **green** when the oven's INTERNAL TEMPERATURE **reaches** the TARGET TEMPERATURE (a **beeper** sounds).

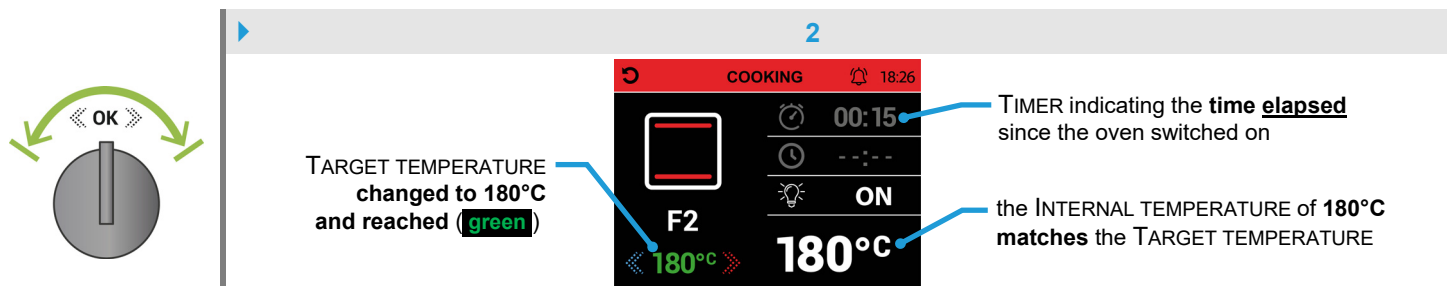

To **stop** the cooking in progress, turn the **function** knob [F] to FUNCTION 0 (OFF). After approximately **5 seconds** (with signal sounding), **the oven switches off** and returns to the **main menu** (page 5).

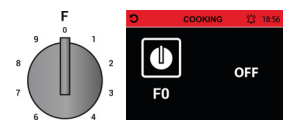




1.4 Using the MINUTE MINDER icon on the start COOKING screen


► Procedure to be followed (fig. 1/4) also in “AUTOMATIC” mode (start **AUTO-COOKING**, section 3.4 page 28).

This icon is for **setting** a timer with beeper without interfering with the oven; proceed as shown in the **example** below.

After activating the **start COOKING** screen (section 1.3 page 13) or **programming** DELAYED START  (section 1 page 10) the icon * appears. **Press** the **control knob** to illuminate  the icon  (fig. 1); to select the icon  (and illuminate it  fig. 2), turn the knob **2 clicks to the left** and **press** it within 10 seconds.

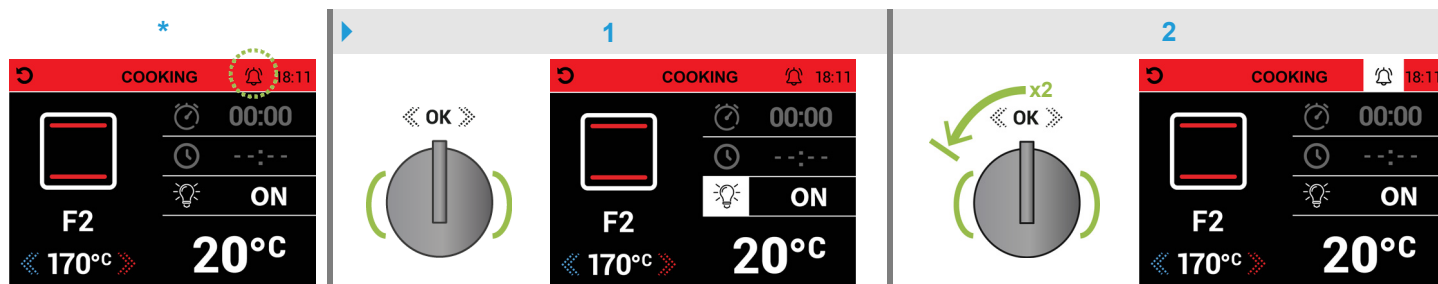

In the **MINUTE MINDER** screen, the “HOURS/h” field is already active (white background, fig. 3) and can be **set** by turning the **control knob** within 10 seconds several **clicks to the right or left** to increase or decrease the **value**; **press** the knob to switch to the “MINUTES/m” field (fig. 4) to set the **value** as described above. Then **press** the knob to **confirm** and return to the **COOKING** screen. The icon  will be active (fig. 5) and the programmed countdown **begins***.

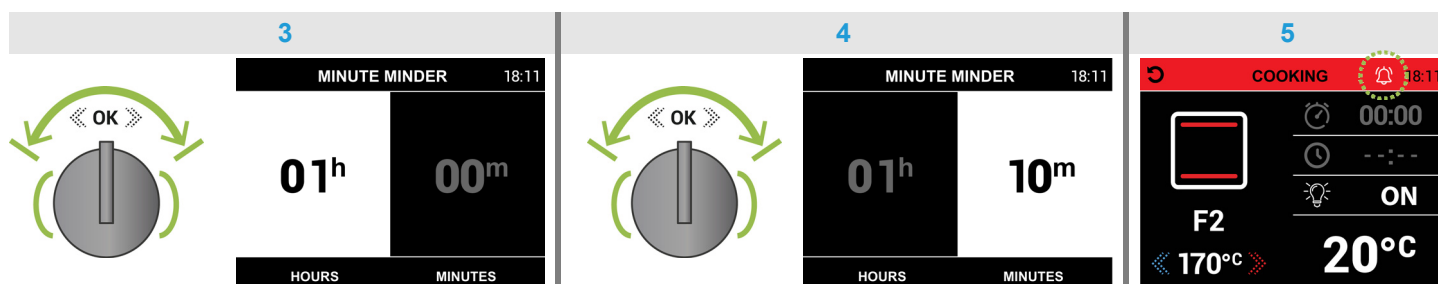


***Note:** the time **remaining** **cannot** be controlled (returning to the **MINUTE MINDER** screen will **cancel** the time; to **exit** the screen wait **10 seconds** and the **COOKING** screen will be displayed again with the icon  deactivated .

At the **end** of the programmed time a **beeper** sounds for approximately **2 minutes**. **Press** the **control knob** to deactivate it (the icon  deactivates .

► Procedure to be followed also in “AUTOMATIC” mode (start **AUTO-COOKING**, section 3.4 page 28).

To **exit** the **start COOKING** screen* and go straight to the **main menu**, cancelling the current cooking and **switching off** the oven, proceed as follows.

Press the **control knob** to illuminate  the icon  (fig. 5a), to select the icon  (and illuminate it  turn the knob **3 clicks to the left** then **press** the knob again to return to the **main menu** (fig. 5b). From the **AUTO-COOKING** screen it returns to the **PASTA** “category”.

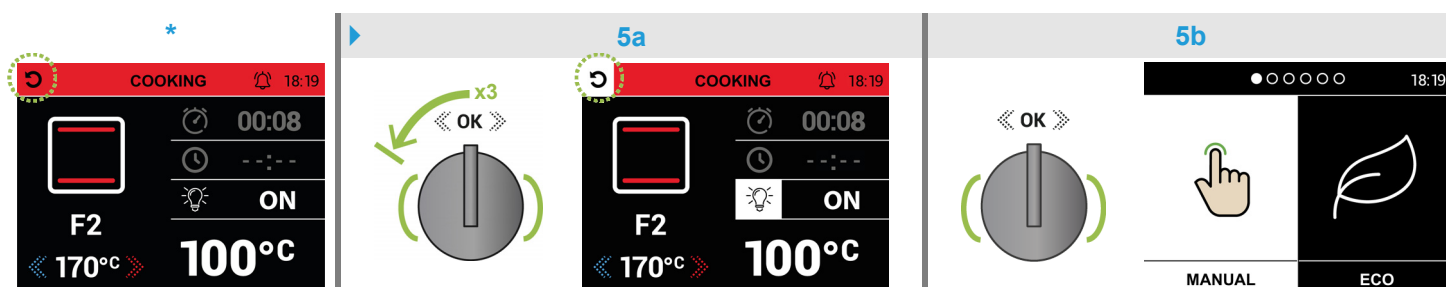




1.5 Using the cooking start screen with **MEAT PROBE IN** and temperature adjustment (in some models)

▶ **Insert the jack plug into the socket** as described in section [h](#) page 12

After **selecting** a FUNCTION (section [b](#) page 7) and changing the oven's TARGET TEMPERATURE if necessary (section [c](#) page 7), continue (from [page 12](#)) by **pressing** the **control knob** for at least 2 seconds to activate the **MEAT PROBE IN** screen (fig. 7), which will **switch on** the oven and **start** cooking.


Note: when using DELAYED START  it will activate **automatically** at the *envisaged* time  (section [f](#) page 10).

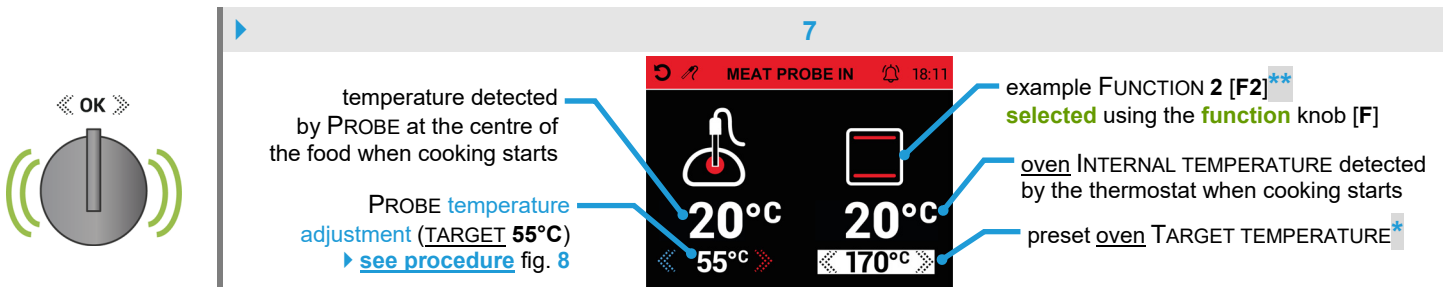

***Note:** the TARGET TEMPERATURE can be changed by **pressing** the **control knob** **2 consecutive times** (the arrows and the field **illuminate**, white background) and **clicking it to the right or left within 10 seconds** to increase or decrease the **value**. After approximately **10 seconds** the illuminated value is displayed with a black background and stored by the programmer.




****Note:** the FUNCTION can be **replaced** at any time (table [page 17](#)) by turning the **function knob [F]** **clockwise or anticlockwise** (fig. 7a) and **pressing** the **control knob** **within 10 seconds** (fig. 7b) **to confirm** [or the FUNCTION can be **restored** by **selecting it again**]; otherwise the cooking in progress is **cancelled** and the **main menu** is displayed (read the **Note** in section [d](#) page 8). The cooking in progress can be **cancelled** by turning the **function knob [F]** to FUNCTION 0 [F0]. After **10 seconds** (with the **END COOKING** request flashing and the signal sounding) the **oven switches off** and returns to the **main menu**.

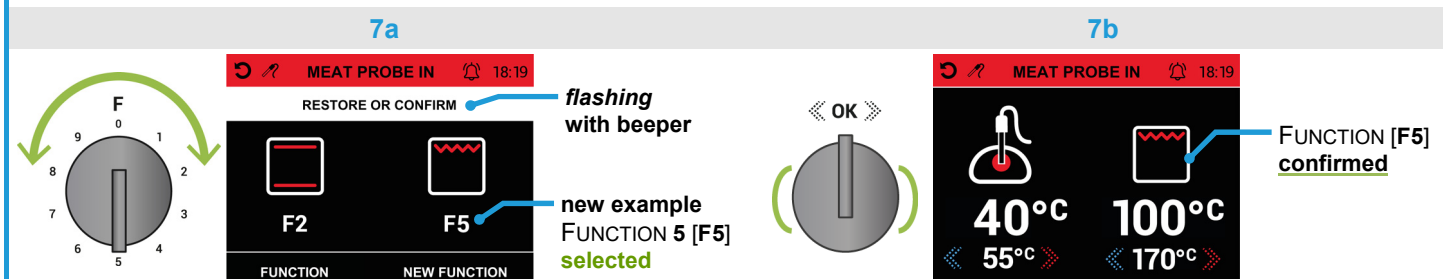

To use the MINUTE MINDER icon  or to **exit** the **MEAT PROBE IN** screen, see the instructions in section [1.6](#) page 16

On the **MEAT PROBE IN** screen the field for **adjusting the desired temperature** at the heart of the food (between **40°C** and **95°C**, **example** fig. 8) is already active. **Click the control knob to the right or left** to increase or decrease the **value**. Once the set temperature is **reached**, the value changes **green** and the **beeper** sounds for approximately **2 minutes**. The oven **switches off automatically**; **press** the **control knob** to silence the beeper. The **main menu** is displayed ([page 5](#)).

⚠ to prevent scalding, do not **remove the jack plug from the socket** until the oven is completely cool.

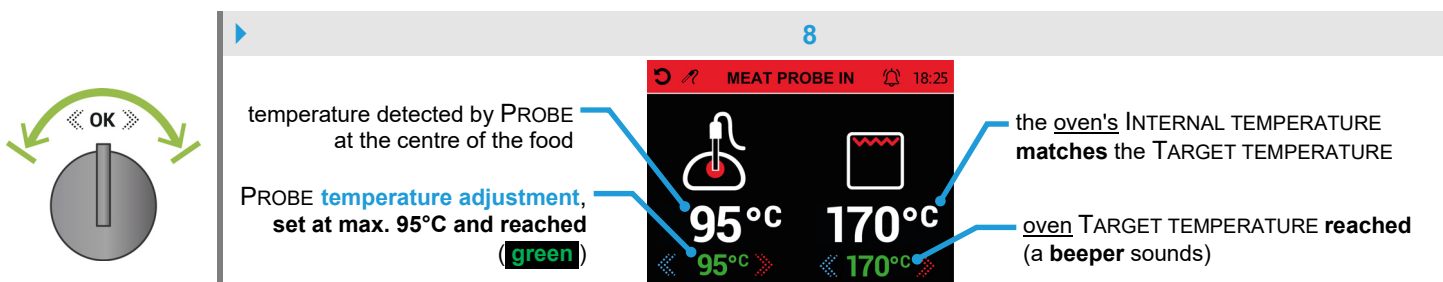





1.6 Using the MINUTE MINDER icon on the MEAT PROBE IN screen (in some models)

This icon is for **setting** a timer with beeper without interfering with the oven; proceed as shown in the **example** below.

After activating the **MEAT PROBE IN** screen (section 1.5 page 15) or **programming** DELAYED START  (section  page 10) the icon * appears, **press** the **control knob** to illuminate the **arrows** (white background, fig. 1) for the oven's TARGET TEMPERATURE; to select the icon  (and illuminate it , fig. 2), turn the knob **1 click to the left** and **press** it within **10 seconds**.

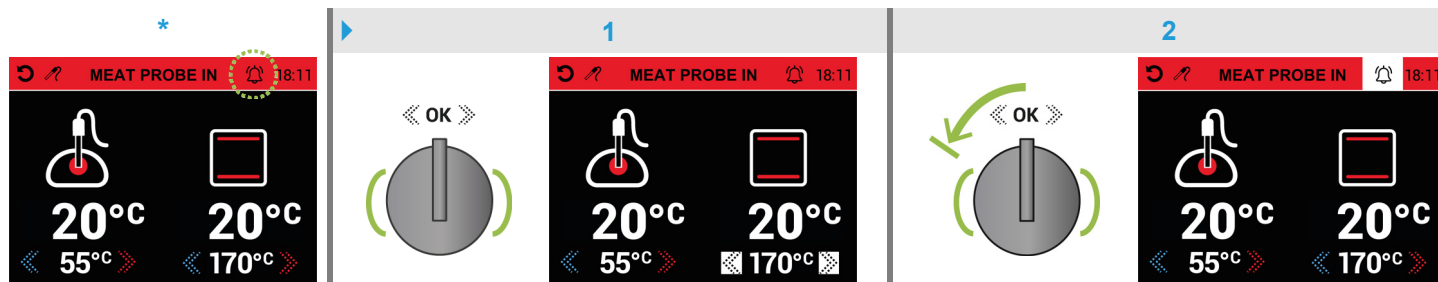

In the **MINUTE MINDER** screen, the "HOURS/h" field is already active (white background, fig. 3) and can be **set** by turning the **control knob** within **10 seconds** several **clicks to the right or left** to increase or decrease the **value**; **press** the knob to switch to the "MINUTES/m" field (fig. 4) to set the **value as described above**. Then **press** the knob to **confirm** and return to the **MEAT PROBE IN** screen. The icon  will be **active** (fig. 5) and the programmed countdown **begins***.

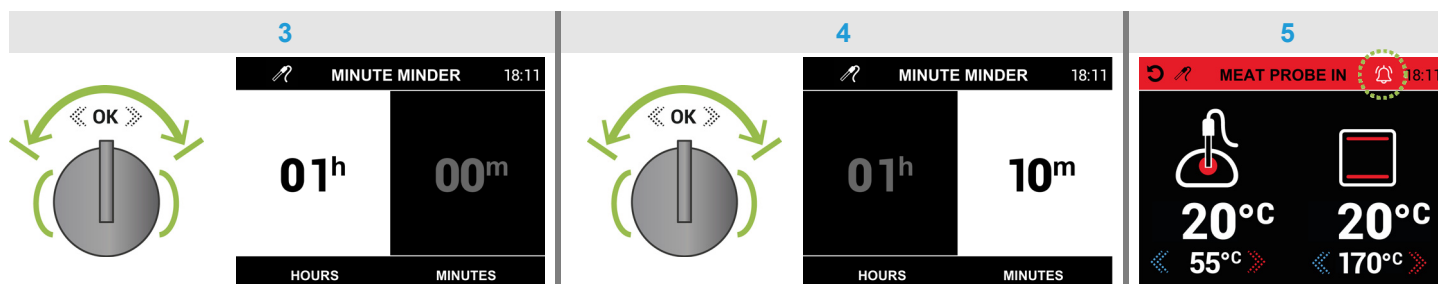


***Note:** the time **remaining** **cannot** be controlled (returning to the **MINUTE MINDER** screen will **cancel** the time; to **exit** the screen wait **10 seconds** and the **MEAT PROBE IN** screen will be displayed again with the icon  deactivated .

At the **end** of the programmed time a **beeper** sounds for approximately **2 minutes**. **Press** the **control knob** to deactivate it (the icon  deactivates .

To **exit** the **MEAT PROBE IN** screen* and go straight to the **main menu**, cancelling the current cooking and **switching off** the oven, proceed as follows.

Press the **control knob** to illuminate the **arrows** (white background, fig. 5a) for the oven's TARGET TEMPERATURE, to select the icon  (and illuminate it ) turn the knob **2 clicks to the left** then **press** the knob again to return to the **main menu** (fig. 5b).

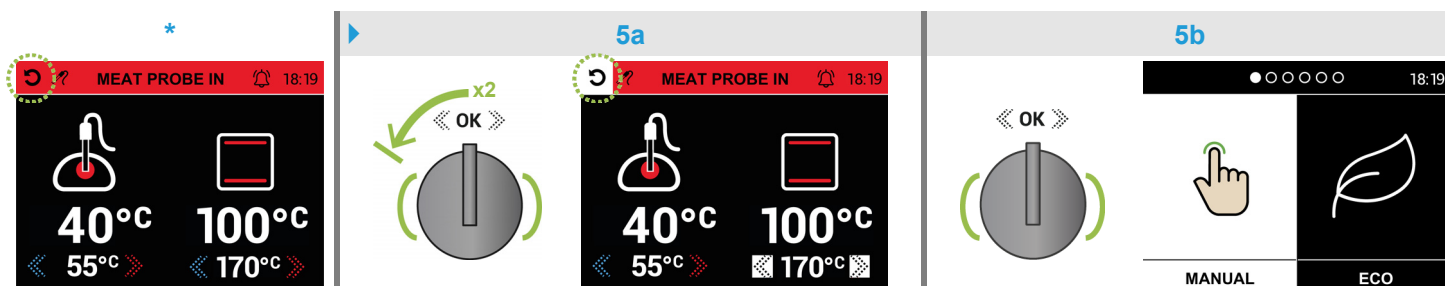




Instructions for the user


EN

FUNCTION (sect. b page 7)	ICON	TEMPERATURE VARIATION °C	RECOMMENDED USE
0	 F0	--	OFF ▪ The oven is off .
1	 F1	--	FAN ▪ Defrosting frozen food to room temperature.
2	 F2	50 - 250 TARGET: 170	UPPER AND LOWER HEATING ELEMENTS ▪ With this type of cooking, the heat comes from the top and the bottom. It is therefore preferable to use the central guides. If the cooking requires a hotter temperature from the bottom or from the top, use the lower or upper guides. Traditional cooking is recommended for all food that requires high cooking temperatures, or long brazing times and when cooking with recipients made of terracotta, porcelain and similar materials.
3	 F3	50 - 200 TARGET: 150	UPPER HEATING ELEMENT ▪ Heat comes only from the top . This function is ideal if cooking requires more heat on the top of the food.
4 MULTIFUNCTION	 F4	50 - 250 TARGET: 170	LOWER HEATING ELEMENT ▪ Heat comes only from the bottom . This function is ideal if cooking requires more heat on the bottom of the food.
4 COMBI-STEAM Do not use with FUNCTION 9 [F9]	 F4	100 - 250 TARGET: 130	UPPER AND LOWER HEATING ELEMENTS WITH STEAM ▪ Cooking in a steam-filled environment has considerable advantages over traditional cooking. It preserves the flavour by drastically reducing the evaporation of liquid, thus maintaining the organoleptic and nutritional qualities. It facilitates heat distribution, resulting in more even cooking and reduces cooking times, thus saving energy. The steam cooking function can be used at low temperatures (100°C), to gently cook fish and vegetables, and at higher temperatures to cook desserts and other dishes when wishing to preserve their delicate flavour.
5	 F5	50 - 320 TARGET: 180	GRILL ELEMENT ▪ The heat comes from the top . Almost all meat can be grilled, with the exception of lean game and dishes such as meat-loaf. Meat and fish to be grilled should be lightly drizzled with oil and placed on the grid bars, which should be placed in the guides closest to or farthest away from the grill element, depending on the thickness of the meat, so as to avoid burning the surface and cooking too little inside.
6	 F6	50 - 250 TARGET: 190	GRILL ELEMENT, FAN, ROTISSERIE ▪ This type of cooking allows heat to penetrate gradually into the food, whilst the surface is exposed to direct grilling. Ideal for cooking on the spit using the rotisserie provided.
7 MULTIFUNCTION	 F7	50 - 315 TARGET: 315	UPPER AND LOWER HEATING ELEMENTS, FAN ▪ Pizza function Heat comes evenly from the top and bottom and the air generated by the fan helps dry out any liquid. This function can reach up to 315°C and is ideal for cooking bread and pizza. The fan starts when the oven reaches the TARGET TEMPERATURE set by the user.
7 COMBI-STEAM Do not use with FUNCTION 9 [F9]	 F7	100 - 250 TARGET: 150	UPPER AND LOWER HEATING ELEMENTS WITH FAN-ASSISTED STEAM ▪ Fan assisted steam cooking has all the aforementioned advantages of traditional steam cooking, with the added advantage of perfect ventilation which ensures even heat distribution and therefore enables different foods to be cooked simultaneously at different cooking levels. Fan assisted steam cooking is particularly recommended for large or delicate cuts of meat. The operation of the fans in intermittent on/off cycles is to be considered normal and does not affect the cooking result.

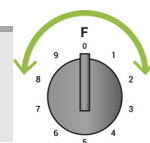



FUNCTION (sect. b page 7)	ICON	TEMPERATURE VARIATION °C	RECOMMENDED USE
8	 F8	 OFF 50 – 250 TARGET: 180	FAN-ASSISTED REAR HEATING ELEMENT ▪ With this type of cooking, the food is heated by preheated air that is circulated in the oven thanks to a fan located on the rear wall of the oven. Heat rapidly and evenly reaches all parts of the oven, thus enabling different food to be cooked at the same time on different shelves. Humidity is eliminated from the air and the drier area prevents odours and flavours from being spread and mixed. The possibility of cooking on more than one shelf allows you to cook many different dishes at the same time. Biscuits and mini pizzas can be cooked in three different baking tins. The oven, however, can also be used for cooking on a single shelf. The lower shelves can be used so that it is easier to monitor cooking. Convection cooking is particularly convenient for bringing frozen food rapidly back to room temperature, for sterilising preserves or home-made fruit in syrup and, finally, for drying mushrooms or fruit.
8	 F8	 ON 180 – 220 TARGET: 180	FAN-ASSISTED REAR HEATING ELEMENT ▪ AIR FRY function Preheating: Wait until the oven is fully preheated before placing food in the oven. Starting cooking with a cold oven compromises uniform cooking results. Recommended accessory: For optimal results, use the trivet (supplied as standard or sold separately as an accessory where not included) combined with the included drip pan. This combination allows hot air to circulate evenly underneath the food, ensuring even cooking and improved crispiness. Arranging food: Arrange food in a single layer, in the center of the rack, without overlapping. Leave space between each piece to allow optimal circulation of hot air around the food. Do not use parchment paper on the rack. Parchment paper blocks air circulation, compromising cooking results. Avoid using it during the AIR FRY function. Cooking times: Cooking times may vary depending on the quantity, thickness, and moisture content of the food. It's recommended to check the cooking time a few minutes before the time indicated in the recipes ▶ see indicative examples in the table in section e page 9
9 * Do not use with FUNCTIONS 4 [F4] and 7 [F7] COMBI-STEAM	 F9	50 – 200 TARGET: 150	RAPID HEATING ▪ In this function the UPPER AND FAN-ASSISTED REAR HEATING ELEMENT are activated to rapidly reach the set temperature. This is not a cooking function: once the temperature is reached, the desired FUNCTION must be selected from 2 to 8 [F2/F8]*

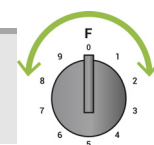




2. "ECO" COOKING MODE



ECO

To enter "ECO" mode, go to the **main menu** and proceed as follows:


- turn the **control knob** several clicks *to the right or left** until "ECO" is **illuminated** (white background, as shown in the adjacent figure);
- **press** the **control knob** to display the **first ECO** screen (with the **function knob [F]** in **0** position);
- ▶ follow the instructions in sections **2.1**, **2.2**, **2.3** to use the relative screens.

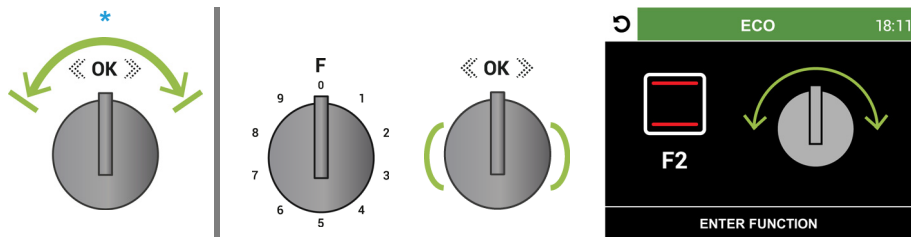


2.1 Using the **ECO** / TARGET TEMPERATURE screen

This **mode** allows the oven to **gradually heat food using residual heat**, thus minimising energy consumption: the oven light **stays off**, **excludes** the use of the **TIMER** (cooking duration) and **DELAYED START** (cooking start time).

As indicated on the first screen* only **FUNCTION 2 [F2]** can be used, **selecting** it with the **function knob [F]** and **entering** the **ECO** / TARGET TEMPERATURE screen (**preset to 180°C**, fig. 1); to **change** it (between **50°C** and **250°C**, the field is already active), **click the control knob to the right or left** to increase or decrease the **value** •

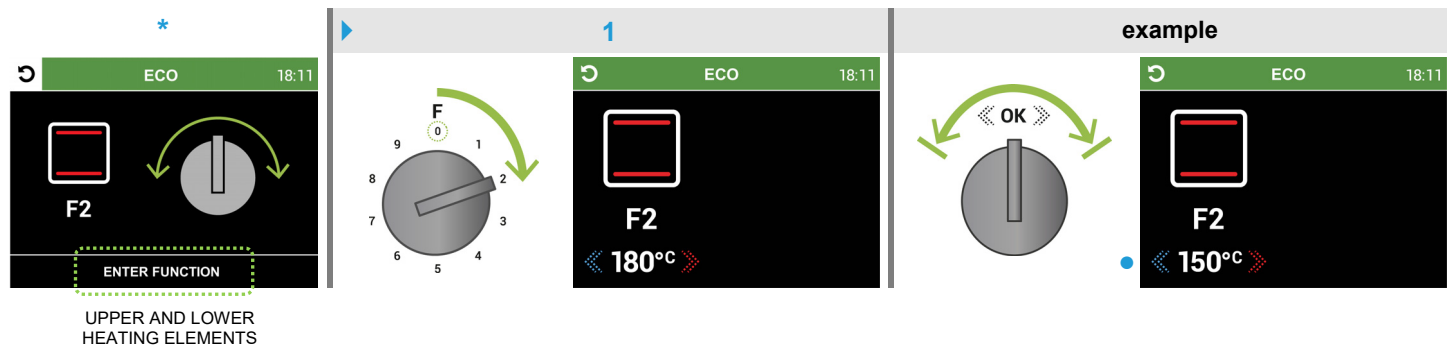

Note ▶ position the container with the food (the central runners are recommended; if more heat is needed from the top or bottom, use the upper or lower runners), **close** the oven door and **activate** the **start ECO-COOKING** screen by **proceeding** as described in section **2.2** page 20

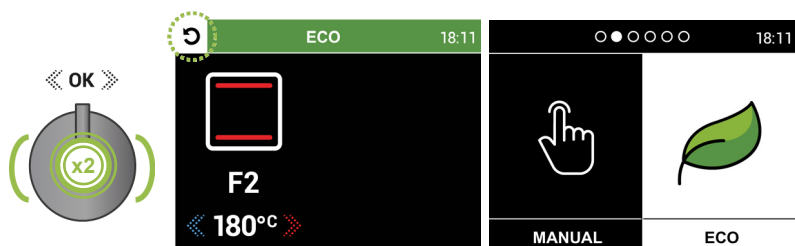



Note: to return to the **main menu**, **press** the **control knob 2 consecutive times** (the icon illuminates). **Press** the knob **to go back** (with **FUNCTION 2 selected**).



2.2 Using the start ECO-COOKING screen


▶ Enter "ECO" mode and the relative ECO screen as described on page 19

After selecting FUNCTION 2 [F2], and changing the TARGET TEMPERATURE if necessary (page 19), position the container with the food and close the oven door. Then press the control knob for at least 2 seconds to activate the start ECO-COOKING screen (fig. 2). The oven switches on and gradually heats the food (the TARGET TEMPERATURE is not visible on this screen).

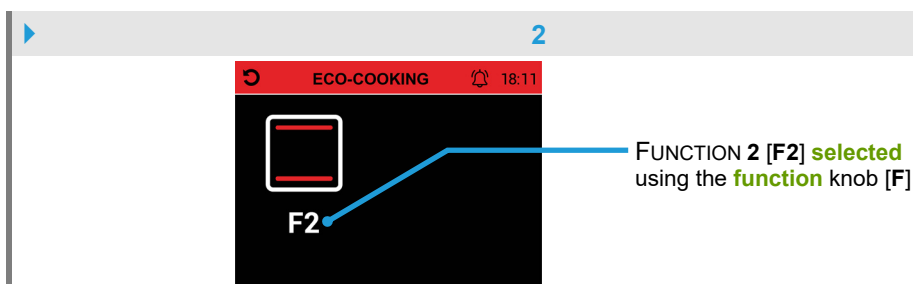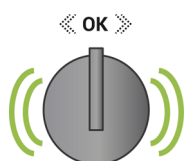

Note: the cooking in progress can be cancelled by turning the function knob [F] until FUNCTION 0 is selected (fig. 2a), after approximately 5 seconds (with the END COOKING request flashing and the signal sounding) the oven switches off and returns to the main menu, or FUNCTION 2* can be restored by selecting it again (fig. 2b).


*FUNCTIONS 1 [F1] and from 3 to 9 [F3/F9] are not active.

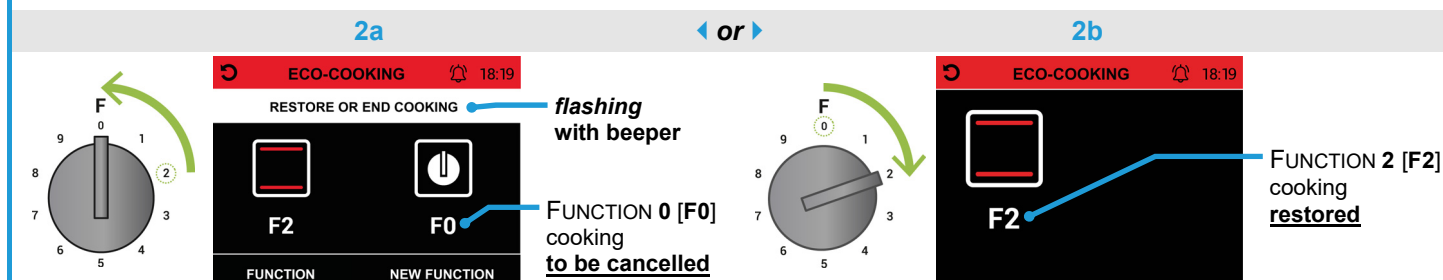


To use the MINUTE MINDER icon  or to exit the start ECO-COOKING screen, see the instructions in section 2.3 page 21

Note: it is advisable **not to open** the oven door to avoid **dispersing** the residual heat; in that event the TARGET TEMPERATURE and INTERNAL TEMPERATURE values will appear on the screen.

The TARGET TEMPERATURE can be changed (the field is already active, example fig. 2c) by clicking the control knob to the right or left to increase or decrease the value. This value turns green when the oven's INTERNAL TEMPERATURE reaches the TARGET TEMPERATURE (a beeper sounds).

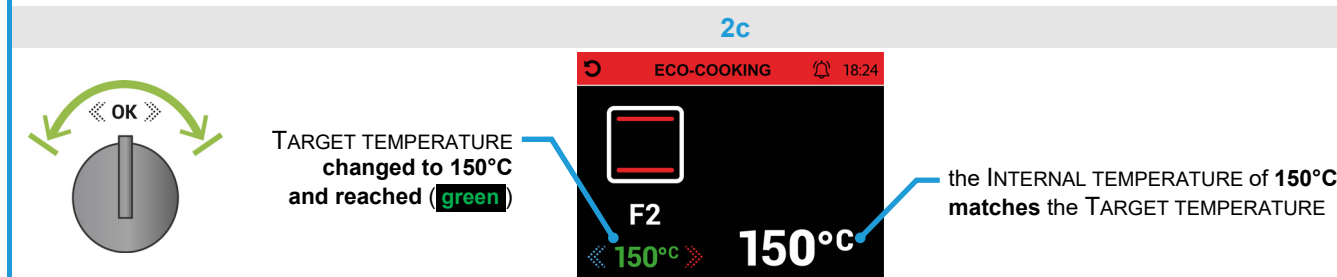

 To stop the cooking in progress, turn the function knob [F] to FUNCTION 0 [F0]. After approximately 5 seconds (with the END COOKING request flashing and the signal sounding, as shown in fig. 2a) the oven switches off and returns to the main menu (page 5).







2.3 Using the MINUTE MINDER icon on the start ECO-COOKING screen

This icon is for **setting** a timer with beeper without interfering with the oven; proceed as shown in the **example** below.

After activating the **start ECO-COOKING** screen (section 2.2 page 20), the icon * appears, **press** the **control knob** to select the icon  (and illuminate it , fig. 1); to select the icon  (and illuminate it , fig. 2), turn the knob **1** *click to the right* and **press** it again.

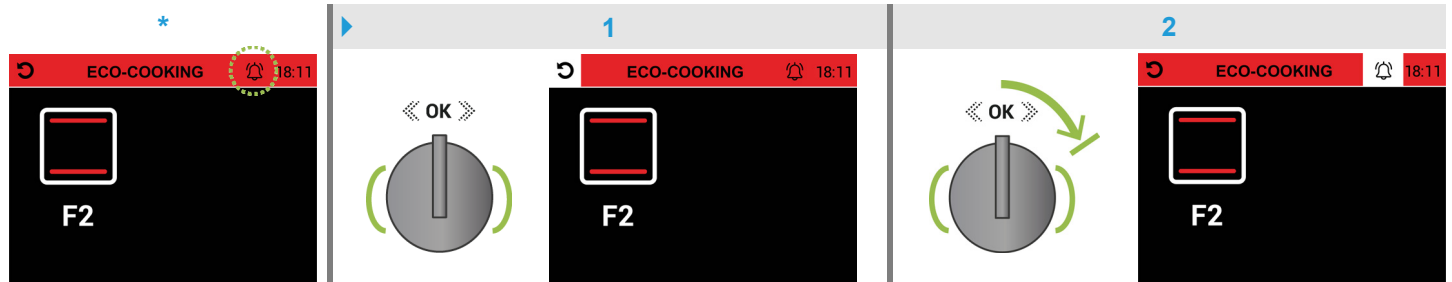

In the **MINUTE MINDER** screen, the “**HOURS/h**” field is already active (white background, fig. 3) and can be **set** by turning the **control knob** *several clicks to the right or left* to increase or decrease the **value**; **press** the knob to switch to the “**MINUTES/m**” field (fig. 4) to set the **value** *as described above*. Then **press** the knob *to confirm* and return to the **ECO-COOKING** screen. The icon  will be active (fig. 5) and the programmed countdown **begins***.

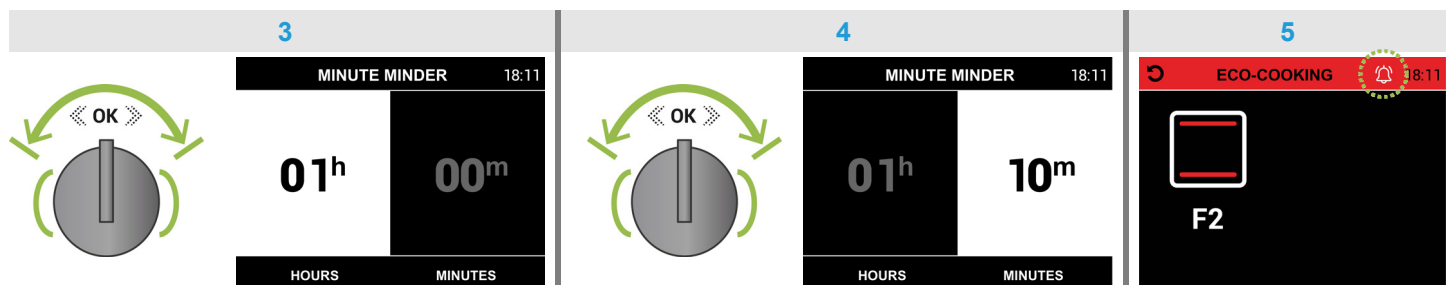


***Note:** the time *remaining* **cannot** be controlled (*to exit* the **MINUTE MINDER** screen, **press** the **control knob** **2 consecutive times**).

At the **end** of the programmed time a **beeper** sounds for approximately **2 minutes**. **Press** the **control knob** to deactivate it (the icon  deactivates .

To exit the **start ECO-COOKING** screen* and go straight to the **main menu**, cancelling the current cooking and **switching off** the oven, proceed as follows.

Press the **control knob** to select the icon  (and illuminate it , fig. 5a); **press** the knob again to return to the **main menu** (fig. 5b).

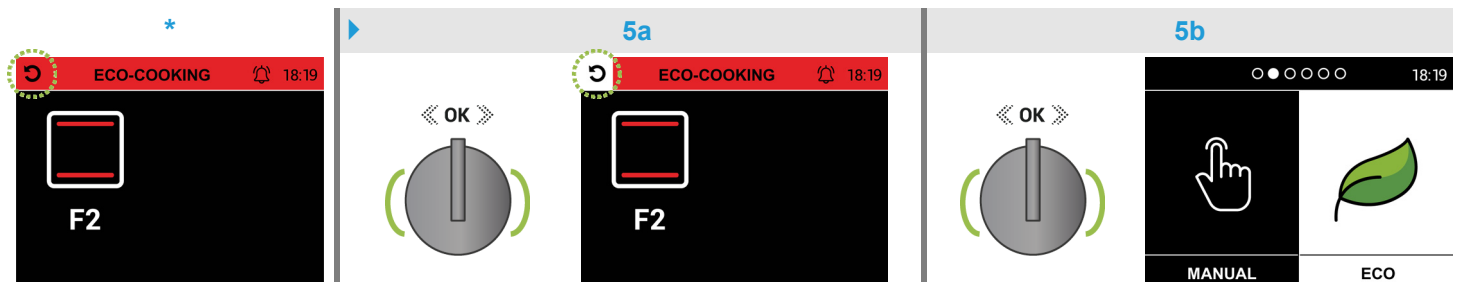






3. "AUTOMATIC" COOKING MODE (COMBI-STEAM oven / Ascot and Genesi)



AUTOMATIC

To enter "AUTOMATIC" mode, go to the **main menu** and proceed as follows:


- turn the **control knob** several clicks *to the right or left** until "AUTOMATIC" is illuminated (white background, as shown in the adjacent figure);
- press** the **control knob** to enter the **first photo menu**, food "categories", displaying the **first photo** **PASTA**;
 - follow the instructions in sections **3.1**, **3.2**, **3.3**, **3.4** to use the **guided procedure** or the instructions in section **3.5** to use the **STEAM-CLEANING FUNCTION**.

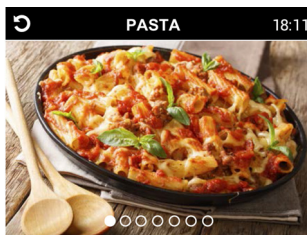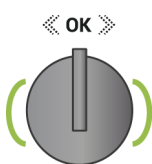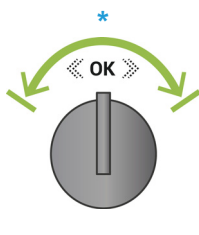







3.1 Using the first photo menu, food "categories"

This **menu** displays the 6 preset "categories" **PASTA** **MEAT** **FISH** **DESSERTS** **BREAD / PIZZA** **SIDES**; browse the **menu** by clicking the **control knob** *to the right or left*.

Note ▶ to confirm a "category" and choose the desired "recipe" (each "category" displays a **second photo menu** of preset "recipes", see *list**), **proceed** as described in section **3.2** page 23



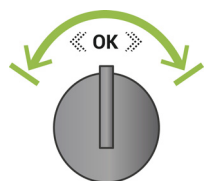


* "recipes" ▶

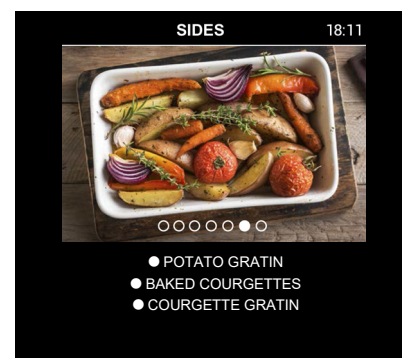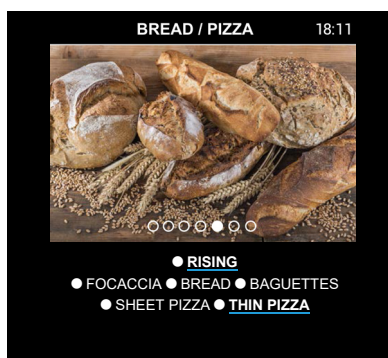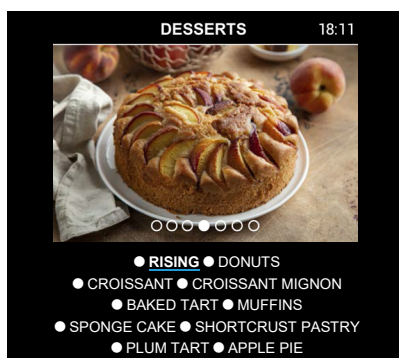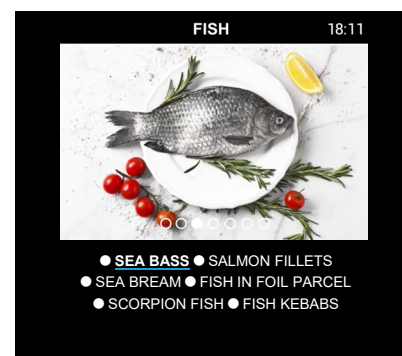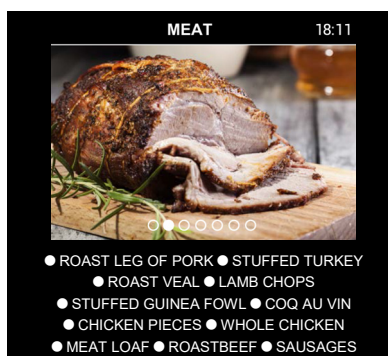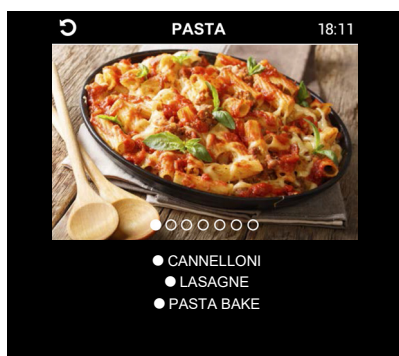

[for **RISING** mode, see section **3.2.1** page 24]

[for the **THIN PIZZA** "recipe", see section **3.2.2** page 26]

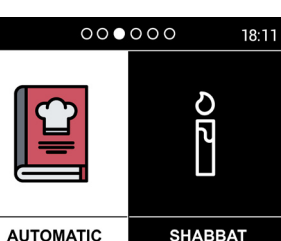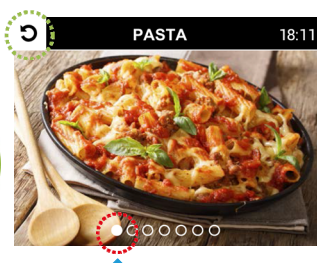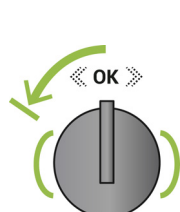

Note to return to the **main menu** from the "categories" menu.

▶ From the **first photo**: turn the **control knob** **1** click *to the left** (the icon  illuminates ) and **press** it to confirm.


*or turn **1** click *to the right* from the last **STEAM-CLEANING** screen.



3.2 Using the second photo menu, preset “recipes” with “recipe card”



This **menu** is for selecting the desired “recipe” and reading the “recipe card”, following the preset parameters step by step; see **example** in figures below.

Browse the **first** photo **menu** by clicking the control knob to the right or left. Then **press** it to confirm a “category” (FISH, fig. 1); a **second** photo **menu** of preset “recipes” is displayed (see *list**). Turn the knob as described above and **press** it to select the desired “recipe” (SEA BASS, fig. 2), displaying the first screen to read the “recipe card” (fig. 3).

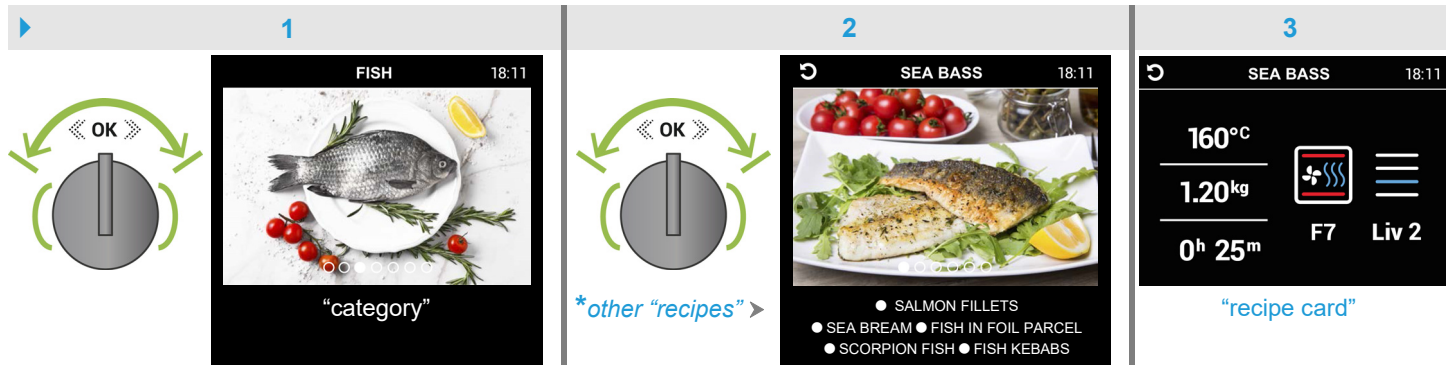

Press the **control knob** to display the second screen (fig. 4). As indicated, **pour** the desired quantity of **water** into the steam generator **tank** using the **measuring jug provided***; then **press** the knob to display the third “ENTER FUNCTION” screen (fig. 5).


***Note:** can hold up to 750ml water, 500ml is sufficient for 2 hours steam cooking; only use **mineral or decalcified** water; **never use** substances containing alcohol.

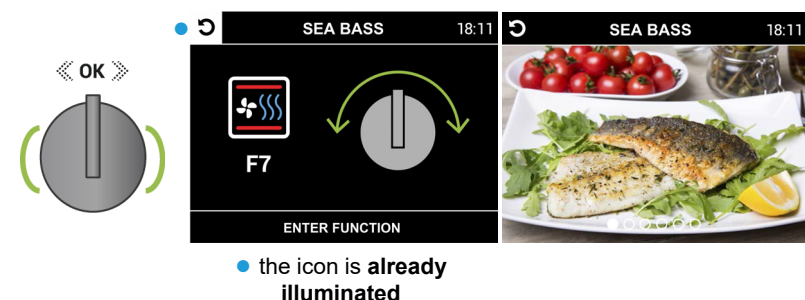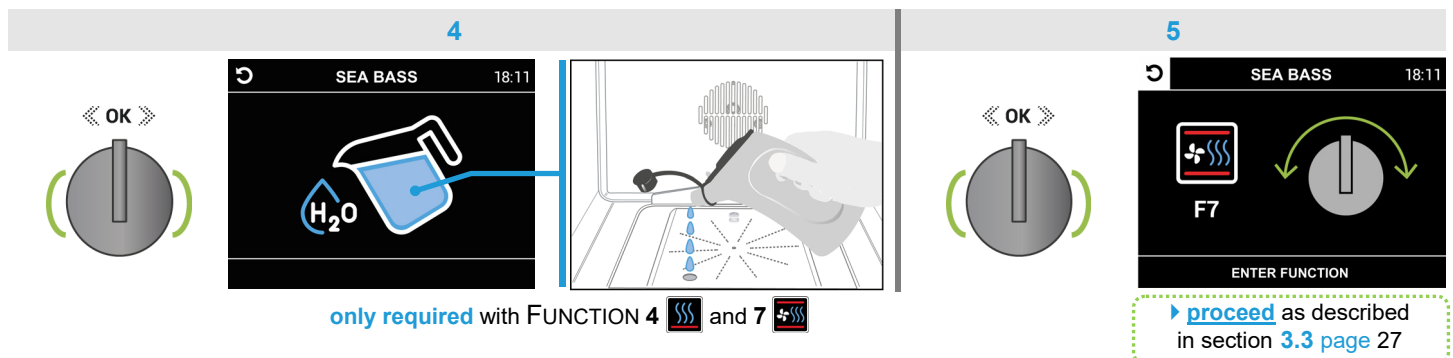

• the icon is **already illuminated**

Note: **press** the **control knob** to exit the “ENTER FUNCTION” screen (within the selected “recipe”) and return to the “recipes” **menu** (in the confirmed “category” e.g. FISH).

► In the intermediate screens (fig. 3, 4) turn **1 click to the left** (to illuminate ☺ the icon ☺) and **press** to confirm.

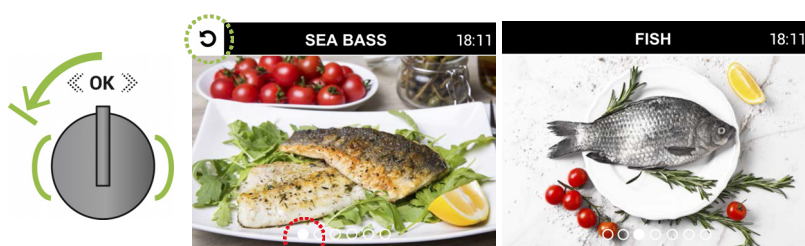

Note to exit the **second** photo **menu** “recipes” and return to the **first menu** “categories”.

► From the first photo in “recipes” **menu** (in the confirmed “category” e.g. FISH), turn the **control knob 1 click to the left*** (the icon ☺ illuminates ☺) and **press** it to confirm.

***or** turn **1 click to the right** from the last photo (FISH KEBABS).

Note: see page 22 for instructions on going back to the **main menu**.




3.2.1 Using **RISING** mode in **DESSERTS** **BREAD / PIZZA** “categories”

This **mode** maintains a constant temperature of 28°C/32°C, facilitating rising, by automatically switching the **light** inside the oven on and off while keeping the **oven off**.

The rising duration is already preset (with a countdown, beeper and **automatic switch-off**).

Click the **control knob to the right** in the **first** photo **menu** and **press** it to confirm a “category” (example **BREAD / PIZZA**, fig. 1), displaying **RISING** mode (fig. 2), then **press** the knob to display the “level card” (fig. 3). **Place** the container with the dough in the oven and **close** the door.

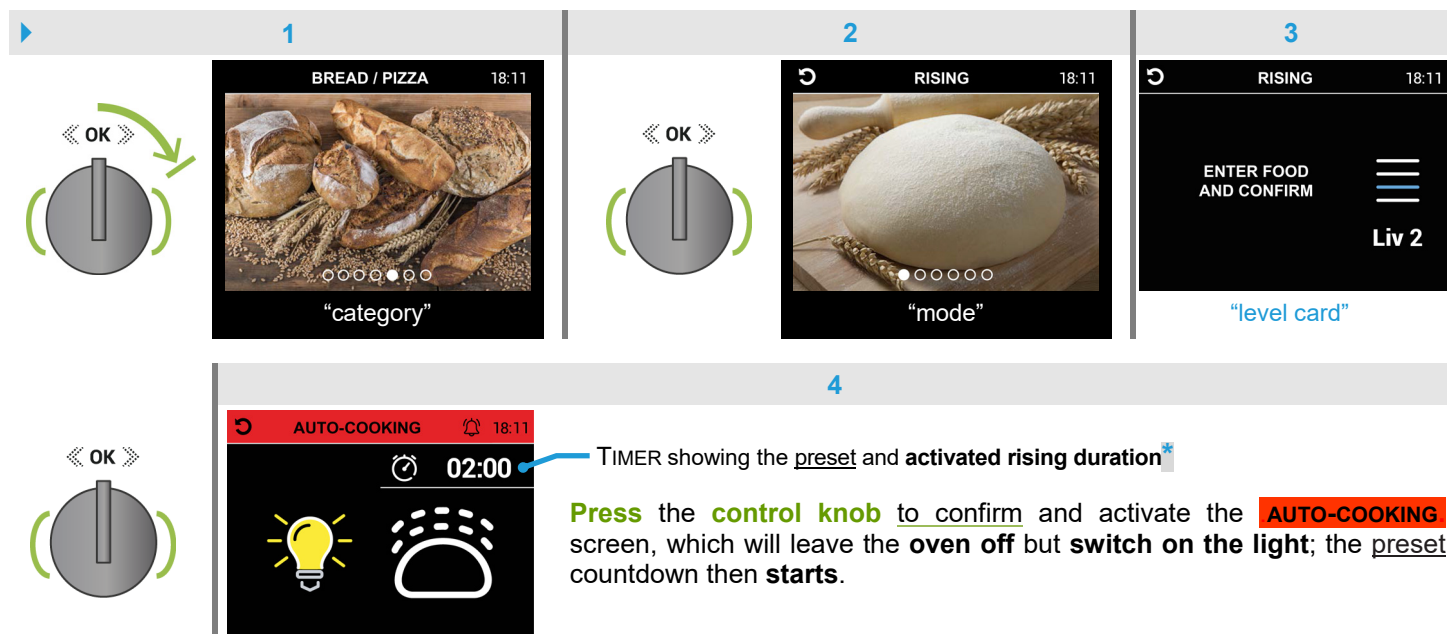

***Note** ▶ the rising duration can be reprogrammed as shown in the **example** below.

Turn the **control knob** several *clicks to the right or left* to set the desired **rising duration** (fig. 4a); the programmed countdown then **starts**.




At the **end** of the rising duration (example fig. 5), a **beeper** sounds for approximately **2 minutes**. The **mode** **switches off automatically**; to silence the beeper, **press** the **control knob** or open the oven door. The **main menu** is once again displayed (page 5).




Note ▶ a MINUTE MINDER* can also be **set** on this screen (with a beeper, without interfering with the rising duration) as shown in the **example** below.

Press the **control knob** to select the icon  (and illuminate it  , fig. 1); to select the icon  (and illuminate it  , fig. 2), turn the knob **1** click to the right and **press it** within 10 seconds.

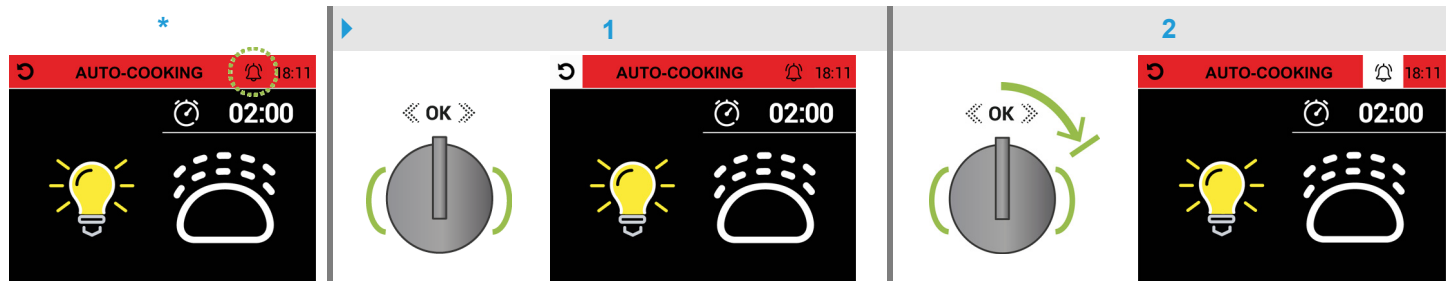


In the **MINUTE MINDER** screen, the “HOURS/h” field is already active (white background, fig. 3) and can be **set** by turning the **control knob** within 10 seconds several clicks to the right or left to increase or decrease the **value**; **press** the knob to switch to the “MINUTES/m” field (fig. 4) to set the **value** as *described above*. Then **press** the knob to confirm and return to the **AUTO-COOKING** screen. The icon  will be active (fig. 5) and the programmed countdown **begins***.

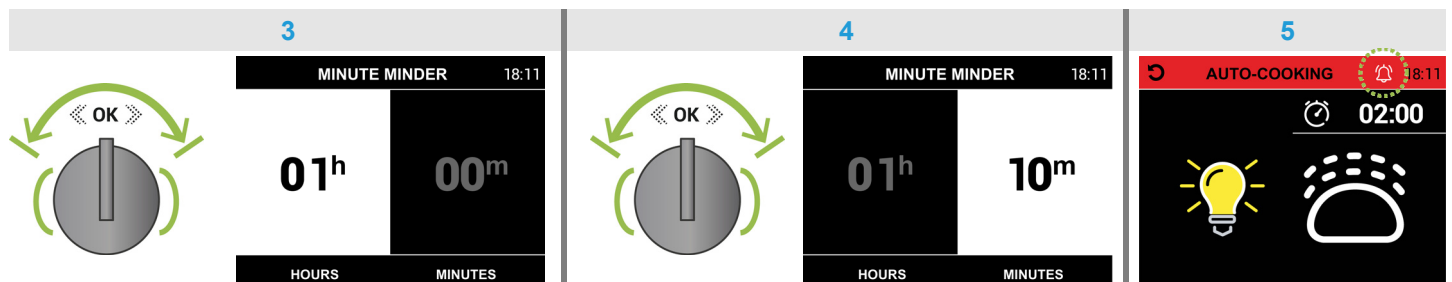

***Note:** the time *remaining* **cannot** be controlled (returning to the **MINUTE MINDER** screen will **cancel** the time; to exit the screen wait **10 seconds** and the **AUTO-COOKING** screen will be displayed again with the icon  deactivated .

At the **end** of the programmed time a **beeper** sounds for approximately **2 minutes**. **Press** the **control knob** to deactivate it (the icon  deactivates .

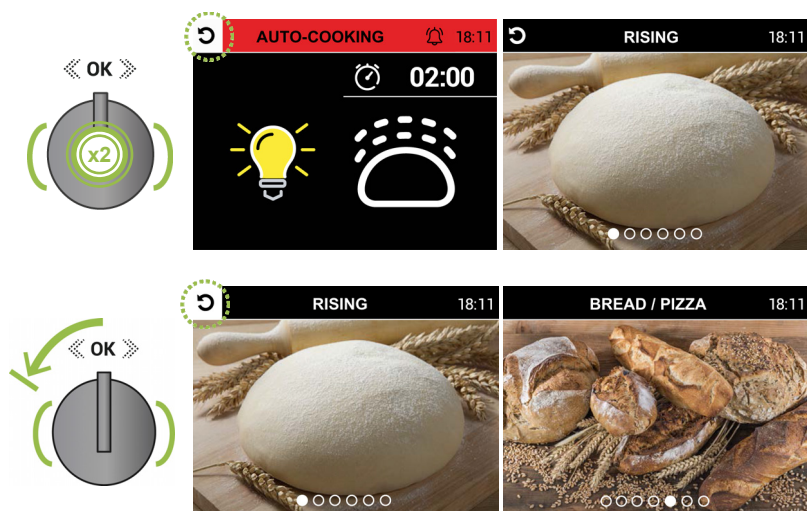

Note: to return to the “**recipes**” photo **menu** (in the confirmed “**category**” e.g. **BREAD / PIZZA**), **press** the **control knob** **2 consecutive times** (the icon  illuminates .

Note to go back from the **second menu** “**recipes**” to the **first menu** “**categories**” (e.g. **BREAD / PIZZA**)*: turn the **control knob** **1** click to the left (the icon  illuminates ) and **press** it to confirm. (*or to go back from the “**level card**” to **RISING mode**)


Note: see [page 22](#) for instructions on going back to the **main menu**.




3.2.2 Using the THIN PIZZA “recipe” in the BREAD / PIZZA “category”

Any number of pizzas can be cooked **using the temperature of 315°C reached** inside the oven (with a countdown, beeper and **no** automatic shutdown). Follow the [procedure](#) with the [preset](#) parameters as shown in the figures below.

Browse the **first** photo menu by **clicking the control knob to the right**. Then **press** it to confirm **BREAD / PIZZA “category”** (fig. 1); a **second** photo menu of preset “**recipes**” is displayed. Turn the knob as *described above* and **press** it to select the **THIN PIZZA “recipe”** (fig. 2), displaying the **first** screen to read the “**recipe card**” (fig. 3).

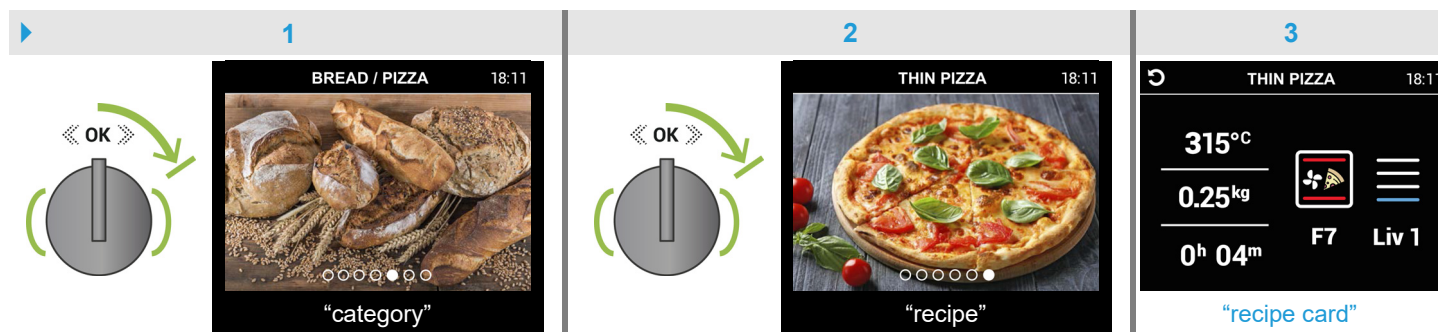


Press the knob to display the **second** screen (fig. 4). As indicated, **select** FUNCTION 7 [F7] using the **function** knob [F] to **enter** the **THIN PIZZA cooking programming** screen (fig. 5).

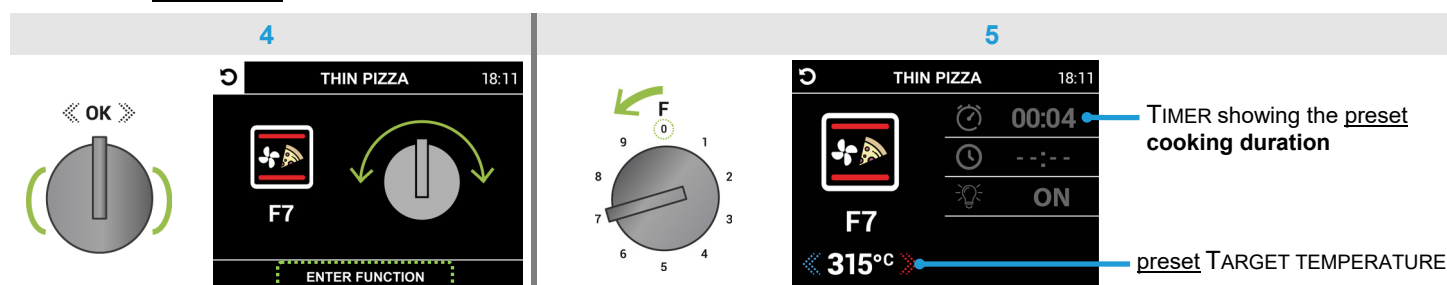


Press the **control knob for at least 2 seconds** to **activate** the **AUTO-COOKING** screen (fig. 6). The oven will **start** preheating. When the oven's INTERNAL TEMPERATURE **reaches** the TARGET TEMPERATURE (the value turns **green**, the fan starts and the **TIMER stops flashing**, **example** in fig. 7), a **beeper** sounds for **2 minutes** and the “**level card**” is displayed (fig. 8). As indicated, **place** the pizza to be cooked in the oven*; **closing** the door **confirms** the **start** of **AUTO-COOKING**. The **4-minute** countdown will **begin**.

* **⚠ the high temperature** reached in this FUNCTION makes the oven, knobs, control panel and drawer very hot; to prevent scalding wear **oven gloves** and take care when opening the door.

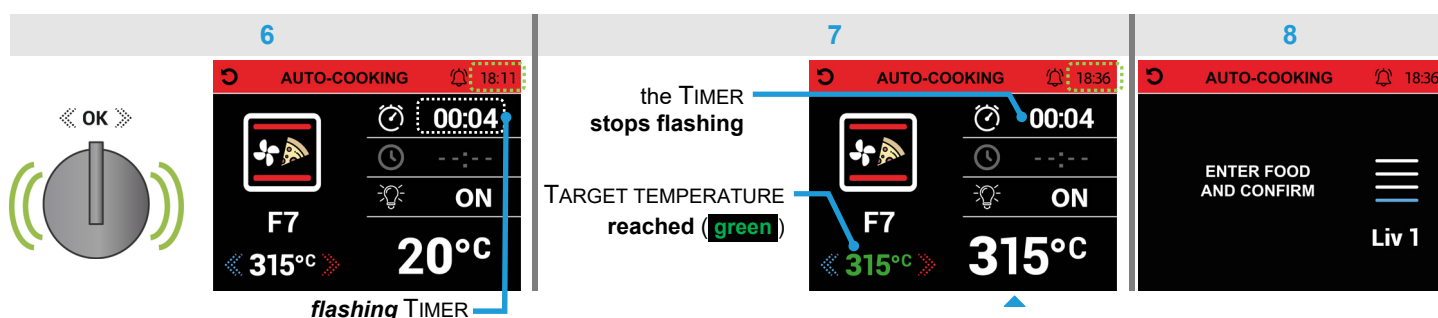

Note: at the **end** of the cooking duration **00:00**, a **beeper** sounds for approximately **2 minutes** (**press** the **control knob** to silence the beeper). **The oven does not switch off**; another pizza can be placed in the oven **at the temperature reached** and another **4-minute** countdown **begins** when the oven door is **closed**. Repeat the same procedure, trying to **limit heat dispersion** while opening and closing the oven door.

To **stop** the cooking in progress, turn the **function** knob [F] to FUNCTION 0 [F0]. After **10 seconds** (with the **END COOKING** request flashing and the signal sounding), **the oven switches off** and returns to the **main menu** (page 5).

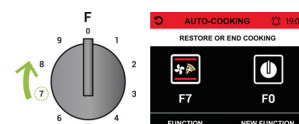




3.3 Using the preset “recipe” cooking programming screen


Follow the [procedure](#) with the preset “recipe” parameters (fig. 6) **or modify** them as described in “MANUAL” mode:

- ▶ LIGHT , to set it to **OFF** before the oven is switched on, section [e](#) page 8
- ▶ TIMER , for reprogramming the **cooking duration**, section [g](#) page 11
- ▶ DELAYED START , for programming the **cooking start time** (to be done last; the  logo will be displayed with the programmed time  flashing), section [f](#) page 10

As indicated in the third screen* (from fig. 5 section 3.2 page 23), **select** FUNCTION 7 [F7] using the **function** knob [F] to enter the **cooking programming** screen of the selected “recipe” (SEA BASS, fig. 6); in this “recipe” the TARGET TEMPERATURE is preset to 160°C but can be **changed between 100°C and 250°C** (the field is already active, including in the next **AUTO-COOKING** screen) by **clicking the control knob to the right or left** to increase or decrease the **value** •

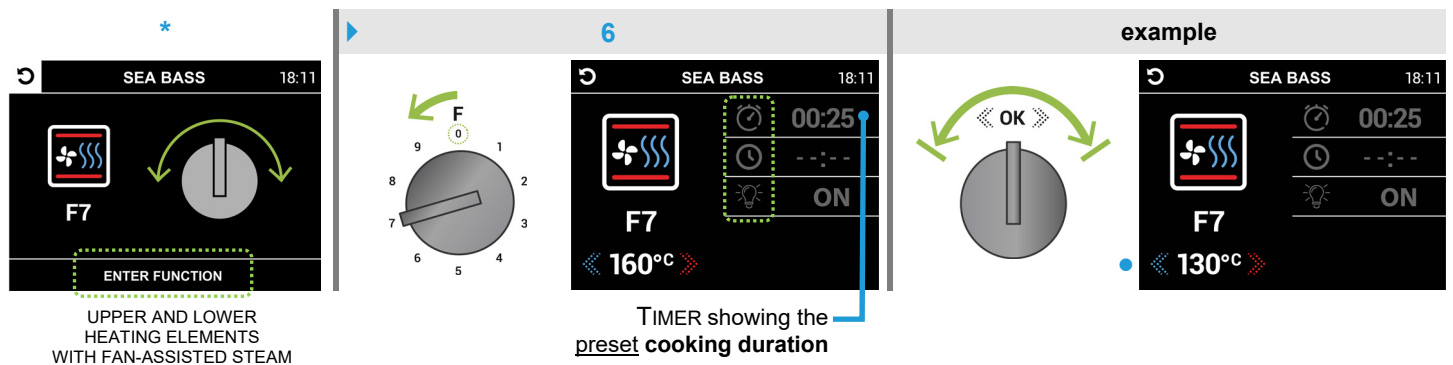


Note: the FUNCTION can be replaced (table [page 17](#)) by turning the **function** knob [F] **clockwise or anticlockwise** (fig. a) and **pressing the control knob within 10 seconds** (fig. b) **to confirm** [or FUNCTION 7 [F7] can be restored by **selecting it again**]; otherwise the **main menu** is displayed. | The [procedure](#) in progress can be cancelled by turning the **function** knob [F] to FUNCTION 0 [F0]. After 10 seconds (with the END COOKING request flashing and the signal sounding) the **main menu** is displayed again.

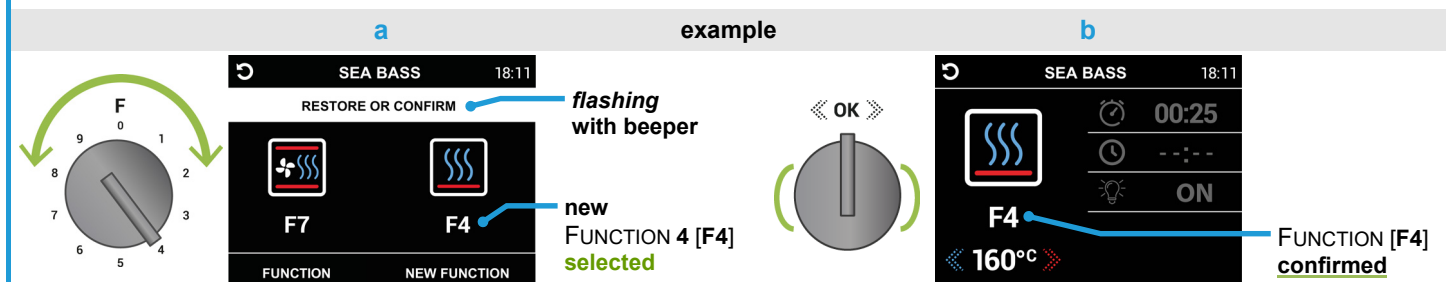

Note ▶ to activate the **AUTO-COOKING** screen, [proceed](#) as described in section 3.4 page 28

To **cancel** the [procedure](#) in progress and exit the screen*: **press** the **control knob** to illuminate  the icon  (fig. 6a), to select the icon  (and illuminate it ) turn the knob **3 clicks to the left** then **press** the knob to return to the “**recipes**” photo **menu** (in the confirmed “category” e.g. FISH, fig. 6b). | See [page 23](#) for instructions on returning to the **first** photo **menu**, food “categories”.

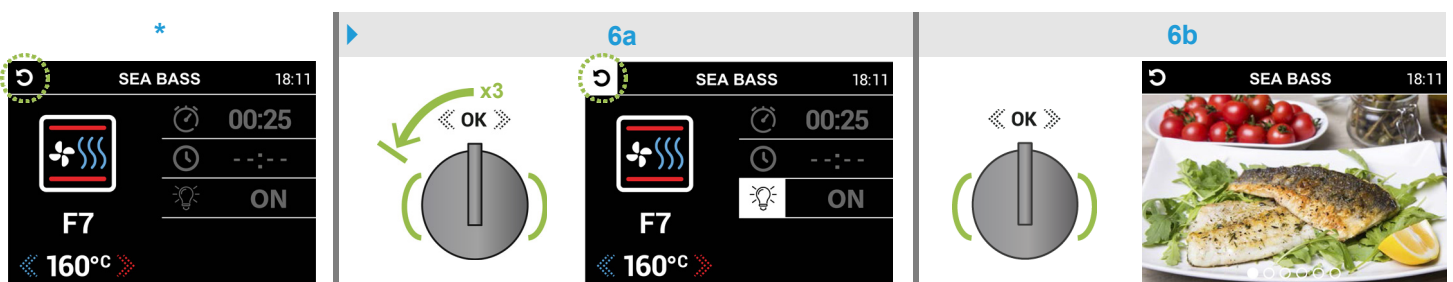




3.4 Using the start **AUTO-COOKING** screen

▶ Enter “**AUTOMATIC**” mode and follow the [procedure](#) described in sections 3.2 and 3.3


After confirming a “category” and selecting the “recipe” using the preset parameters shown in the **example** on [page 23](#) and 27, **press** the **control knob** **for at least 2 seconds** to **activate** the **AUTO-COOKING** screen (fig. 7), which will **start** preheating.

Note: when using DELAYED START  it will activate **automatically** at the *envisaged* time  (section [f](#) [page 10](#)).

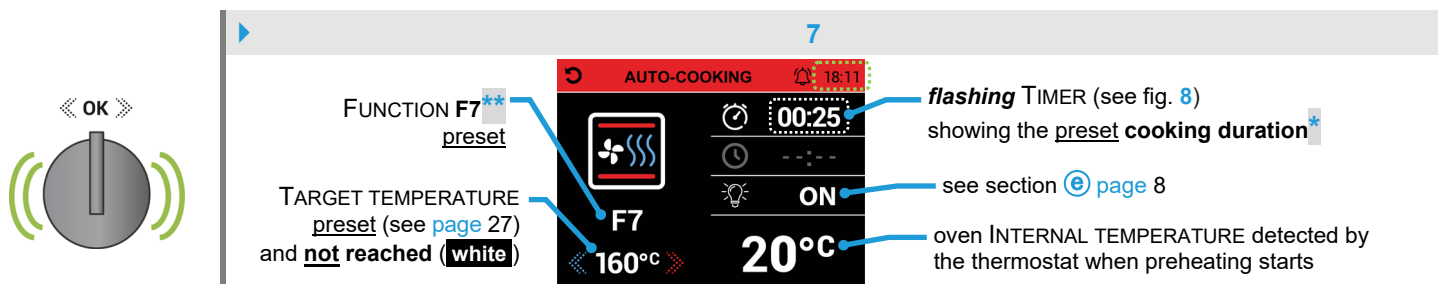

***Note:** the preset cooking duration can be **reprogrammed** as described in section [g](#) [page 11](#)


****Note:** the FUNCTION can be **replaced** (see **example** [page 27](#) and *read* the [Note](#) in section [d](#) [page 8](#)). | The **procedure** in progress can be **cancelled** by turning the **function** knob [F] to FUNCTION 0 (fig. 7a). **After 10 seconds** (with the **END COOKING** request flashing and the signal sounding) **the oven switches off** and returns to the **main menu**, **or** FUNCTION 7 can be **restored** by **selecting it again** (fig. 7b).

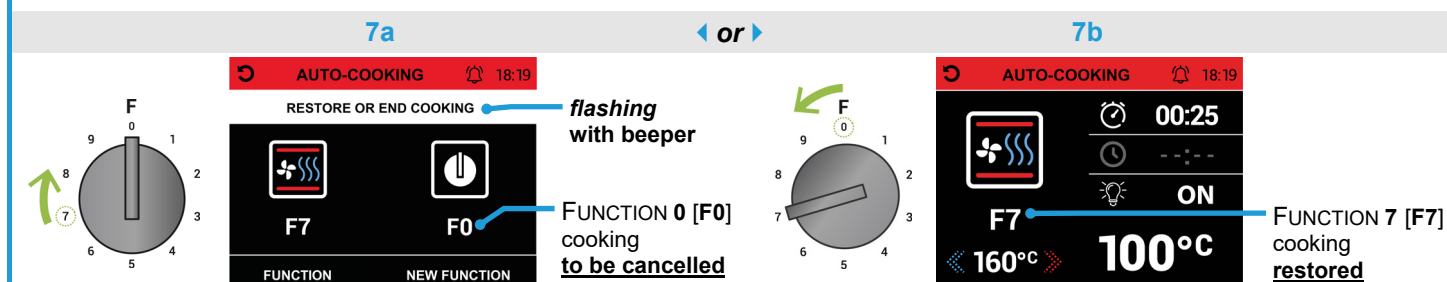

To use the MINUTE MINDER icon  or to **exit** the **AUTO-COOKING** screen, follow the procedures described in section 1.4 [page 14](#)

When the oven's INTERNAL TEMPERATURE **reaches** the TARGET TEMPERATURE (the value turns **green** and the TIMER **stops flashing**, **example** in fig. 8), a **beeper** sounds for **1 minute** and the “level card” is displayed (fig. 9). As indicated **place** the food to be cooked in the oven and **closing** the door **confirms** the **start** of **AUTO-COOKING** *. The countdown of the preset **cooking duration** will **begin**.

***Note:** if **no action is taken** in this phase, cooking will begin **automatically** after **1 minute** (*useful when using* DELAYED START ).

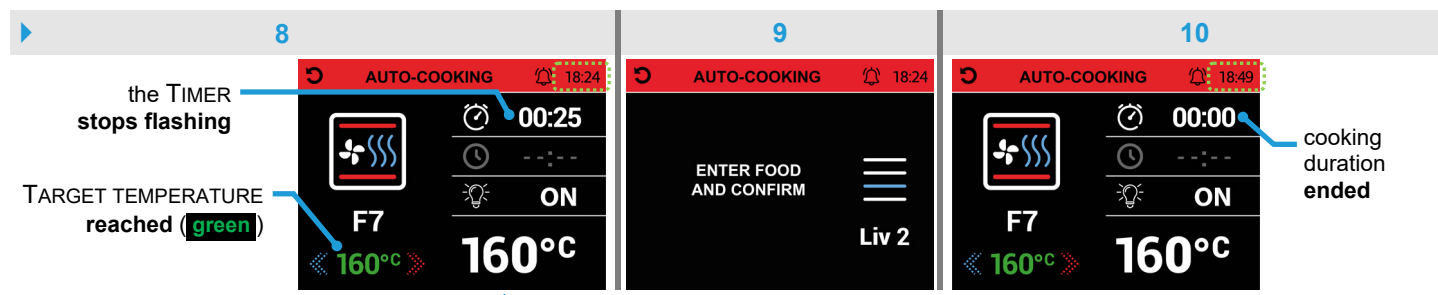

At the **end** of the preset cooking duration (fig. 10), the **beeper** sounds for approximately **2 minutes**. The oven **switches off automatically**; to silence the beeper, **press** the **control knob** or open the oven door. The **main menu** is once again displayed ([page 5](#)).

⚠ open the oven door slightly to allow the **steam** to dissipate fully and prevent the risk of scalding.




3.5 Using the STEAM-CLEANING FUNCTION

Steam generated inside the oven is used to remove any grease or dirt **naturally and ecologically**.


Follow the [procedure](#) with the [preset](#) parameters as shown in the figures below.

Enter “**AUTOMATIC**” mode (chapter 3. page 22) to display the first photo **PASTA**; turn the **control knob** **2 clicks to the left** (fig. 1) and **press** it to **confirm** the **STEAM-CLEANING** FUNCTION (fig. 2), displaying the **first** screen to read the **preset** parameters (fig. 3).

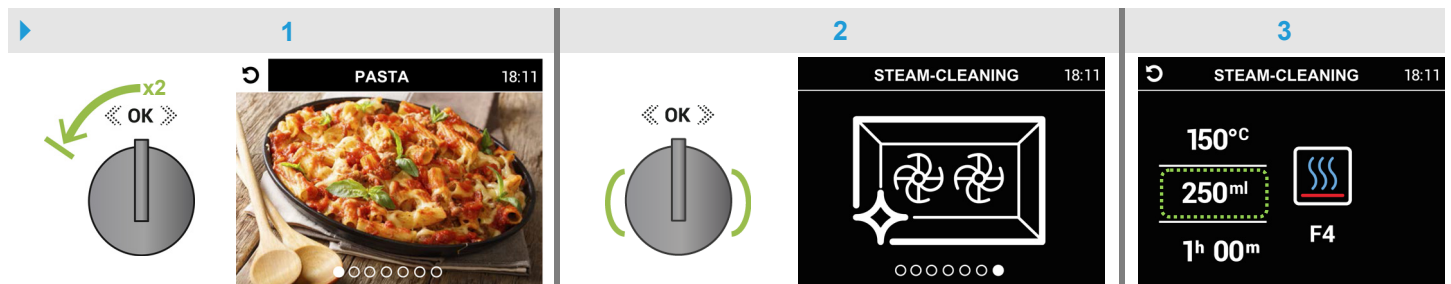


Press the **control knob** to display the **second** screen (fig. 4). As indicated previously, **pour 250ml of water** into the steam generator **tank** using the **measuring jug provided***; then **press** the knob to display the **third** “**ENTER FUNCTION**” screen (fig. 5).

***Note:** only use **mineral or decalcified** water; **never use** substances containing alcohol.

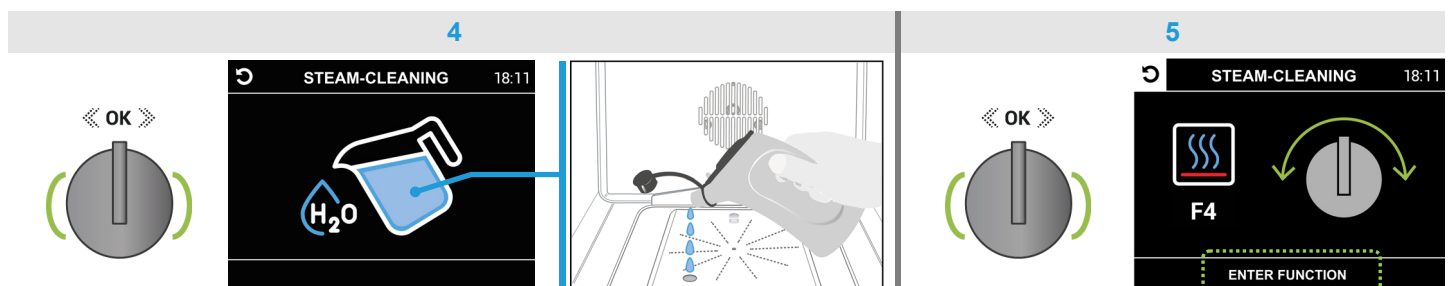

As indicated in the third screen, **select** FUNCTION 4 [F4] using the **function** knob [F] to **enter** the **STEAM-CLEANING programming** screen (fig. 6); **press** the **control knob for at least 2 seconds** to **activate** the **AUTO-COOKING** screen (fig. 7). The oven will **start** preheating and counting down the preset **cleaning duration** **01:00**. When the oven's INTERNAL TEMPERATURE **reaches** the TARGET TEMPERATURE (the value turns **green**, **example** in fig. 8) a **beeper** sounds.

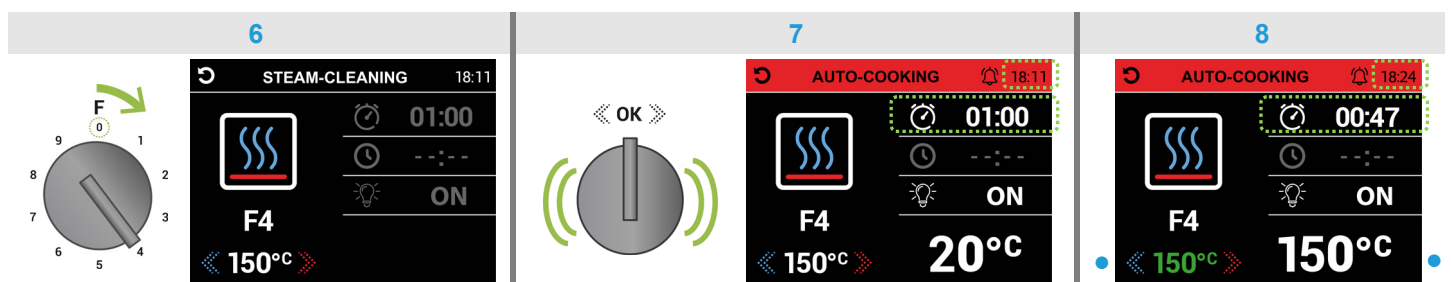

At the **end** of the preset cleaning duration **00:00**, the **beeper** sounds for approximately **2 minutes**. The oven **switches off automatically**; to silence the beeper, **press** the **control knob** or open the oven door. The **main menu** is once again displayed (page 5).

⚠ open the oven door slightly to allow the **steam** to dissipate fully and prevent the risk of scalding. Use a damp sponge or microfiber cloth to remove all residue inside the oven.






4. "SHABBAT" COOKING MODE (COMBI-STEAM oven)



SHABBAT

To enter "SHABBAT" mode, go to the **main menu** and proceed as follows:


- turn the **control knob** several clicks to the **right or left*** until "SHABBAT" is illuminated (white background, as shown in the adjacent figure);
- **press** the **control knob** to display the first SHABBAT screen (with the **function knob [F]** in 0 position);
- ▶ follow the instructions in sections 4.1, 4.2, 4.3 to use the relative screens.

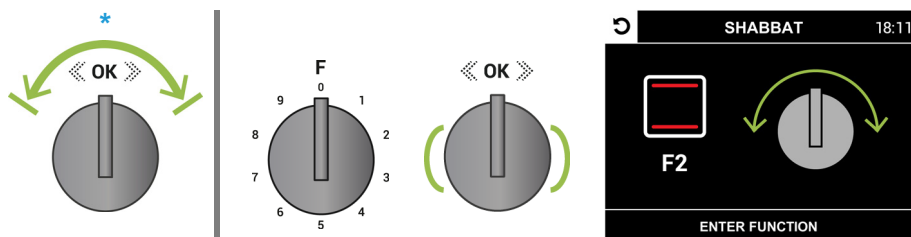


4.1 Using the SHABBAT / TARGET TEMPERATURE screen

This mode allows the oven to operate for **over 24 hours** at a constant, low temperature of between **60°C** and **100°C**, minimising energy consumption: the oven light **stays off**, excludes the use of the **TIMER** (cooking duration) and **DELAYED START** (cooking start time).

As indicated on the first screen* only **FUNCTION 2 [F2]** can be used, **selecting** it with the **function knob [F]** and **entering** the **SHABBAT / TARGET TEMPERATURE** screen (preset to **80°C**, fig. 1); to **change** it (the field is already active), **click the control knob to the right or left** to increase or decrease the **value**.

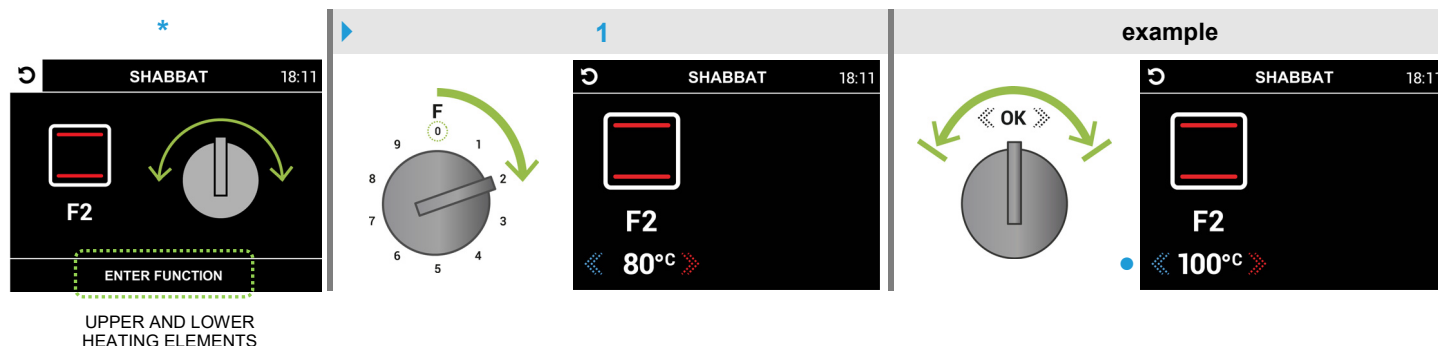

Note ▶ to **activate** the **start SHABBAT-COOKING** screen, **proceed** as described in section 4.2 page 31

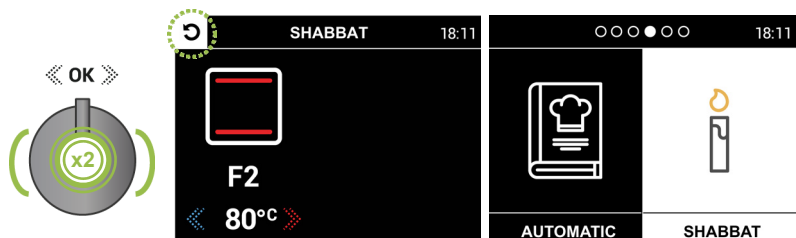

Note: to return to the **main menu**, **press** the **control knob 2 consecutive times** (the icon illuminates). **Press** the knob **to go back** (with **FUNCTION 2 selected**).




4.2 Using the start **SHABBAT-COOKING** screen

▶ Enter “**SHABBAT**” mode and the relative **SHABBAT** screen as described on page 30

After **selecting** FUNCTION 2 [F2], **press** the **control knob** **for at least 2 seconds** to **activate** the **start** **SHABBAT-COOKING** screen (fig. 2), which will **start** preheating.


Note: the central runners are recommended for this cooking mode; if more heat is needed from the top or bottom, use the upper or lower runners.

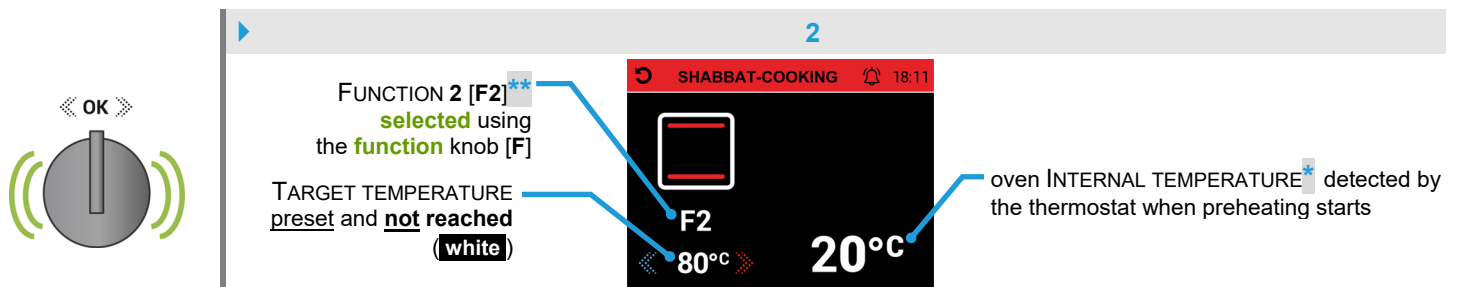

***Note:** the value **increases** as the oven's INTERNAL TEMPERATURE rises **until it matches** the TARGET TEMPERATURE (fig. 3).


****Note:** the cooking in progress can be **cancelled** by turning the **function** knob [F] until FUNCTION 0 is **selected** (fig. 2a), after approximately **5 seconds** (with the **END COOKING** request flashing and the signal sounding) **the oven switches off** and returns to the **main menu**, or FUNCTION 2 can be **restored** by **selecting it again** (fig. 2b).

FUNCTIONS 1 [F1] and from 3 to 9 [F3/F9] are **not** active.

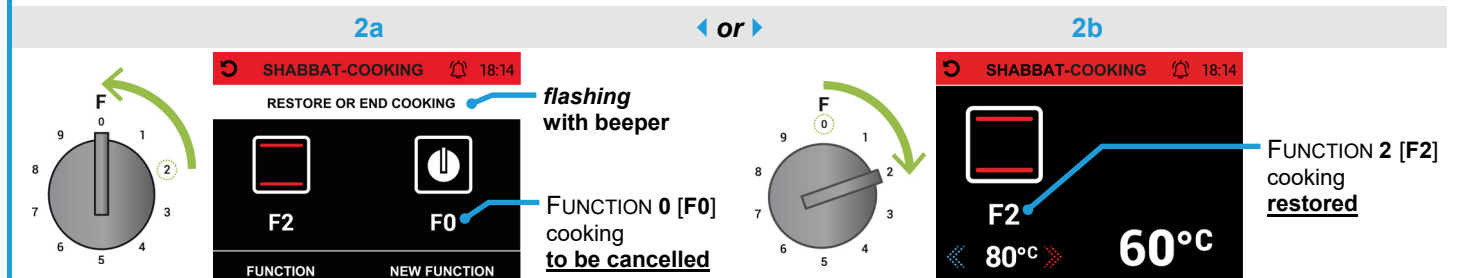


To use the MINUTE MINDER icon  or to **exit** the **start** **SHABBAT-COOKING** screen, see the instructions in section 4.3 page 32

The TARGET TEMPERATURE can also be **changed** during cooking (between **60°C** and **100°C**, the field is already active, **example** fig. 3) by **clicking the control knob to the right or left** to increase or decrease the **value**. This value turns **green** when the oven's INTERNAL TEMPERATURE **reaches** the TARGET TEMPERATURE (a **beeper** sounds).

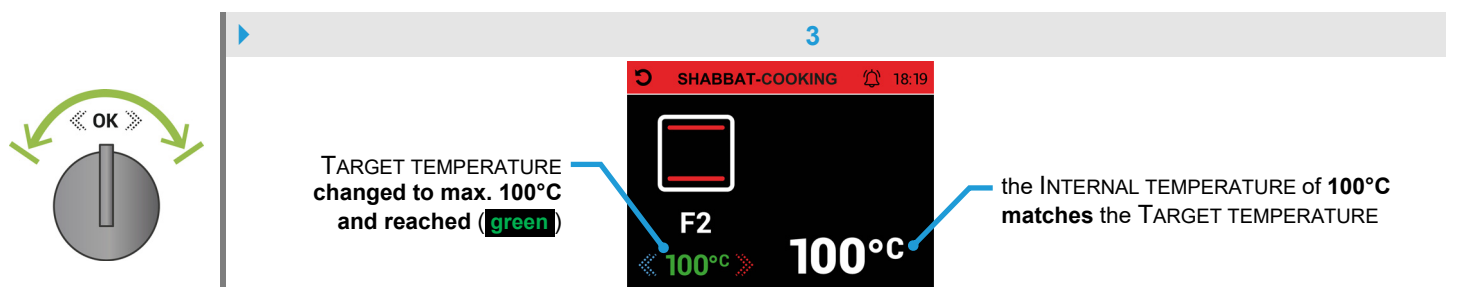

 To **stop** the cooking in progress, turn the **function** knob [F] to FUNCTION 0 [F0]. After approximately **5 seconds** (with the **END COOKING** request flashing and the signal sounding, as shown in fig. 2a) **the oven switches off** and returns to the **main menu** (page 5).







4.3 Using the MINUTE MINDER icon on the start SHABBAT-COOKING screen

This icon is for **setting** a timer with beeper without interfering with the oven; proceed as shown in the **example** below.

After activating the **start SHABBAT-COOKING** screen (section 4.2 page 31), the icon * appears, **press** the **control knob** to select the icon  (and illuminate it , fig. 1); to select the icon  (and illuminate it , fig. 2), turn the knob **1 click to the right** and **press** it again.

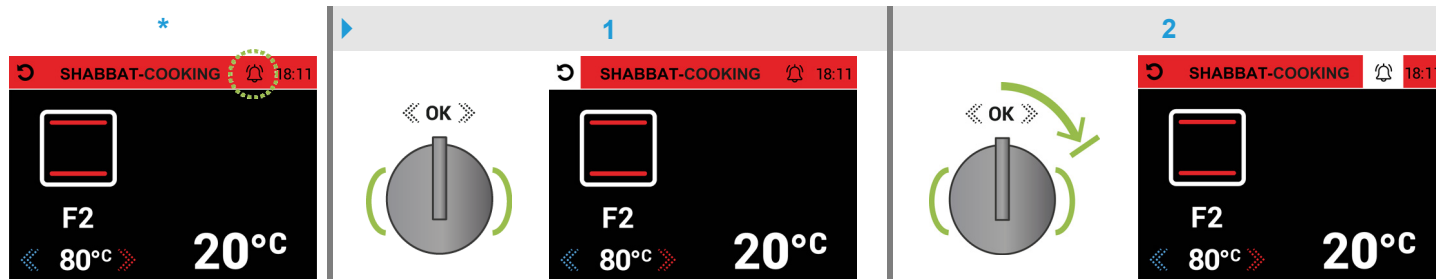

In the **MINUTE MINDER** screen, the “HOURS/h” field is already active (white background, fig. 3) and can be **set** by turning the **control knob** *several clicks to the right or left* to increase or decrease the **value**; **press** the knob to switch to the “MINUTES/m” field (fig. 4) to set the **value** as described above. Then **press** the knob to confirm and return to the **SHABBAT-COOKING** screen. The icon  will be active (fig. 5) and the programmed countdown **begins***.

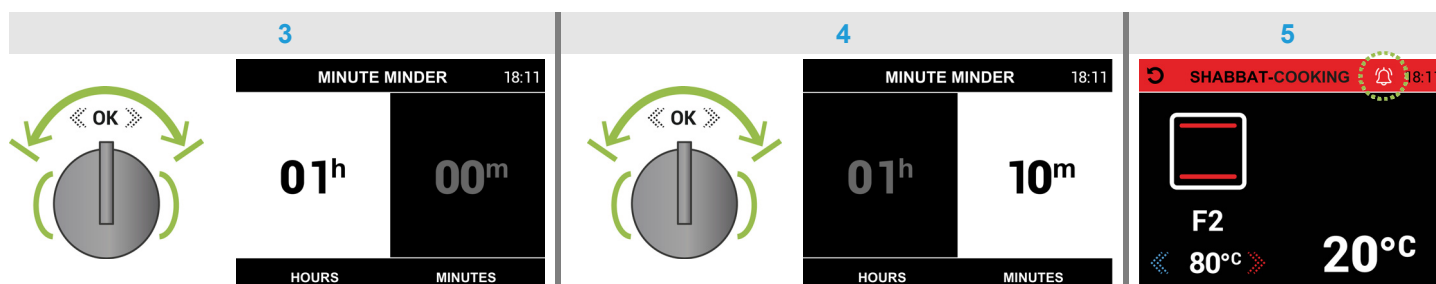


***Note:** the time *remaining* **cannot** be controlled (to exit the **MINUTE MINDER** screen, **press** the **control knob** 2 consecutive times).

At the **end** of the programmed time a **beeper** sounds for approximately **2 minutes**. **Press** the **control knob** to deactivate it (the icon  deactivates .

To exit the **start SHABBAT-COOKING** screen* and go straight to the **main menu**, cancelling the current cooking and **switching off** the oven, proceed as follows.

Press the **control knob** to select the icon  (and illuminate it , fig. 5a); **press** the knob again to return to the **main menu** (fig. 5b).

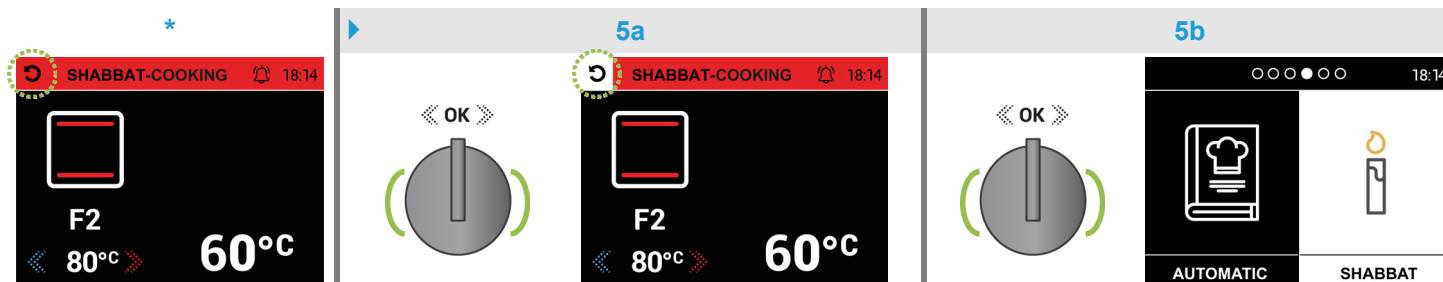




5. "SETUP" MODE



SETUP

To enter "SETUP" mode, go to the **main menu** and proceed as follows:

- turn the **control knob** several clicks *to the right or left** until "SETUP" is **illuminated** (white background, as shown in the adjacent figure);
- **press** the **control knob** (fig. 1) to enter the **SETUP** screen, displaying the **items** "TIME", "LANGUAGE" and "DISPLAY BRIGHTNESS";
- turn the **control knob** 4 clicks *to the right* (fig. 2) to display the other **items**, "SOUND", "SOFTWARE VERSION" and "DEMO MODE";
 - ▶ follow the instructions in section 5.1 to enter the individual **menu items** and **set** the parameters in the relative screens.

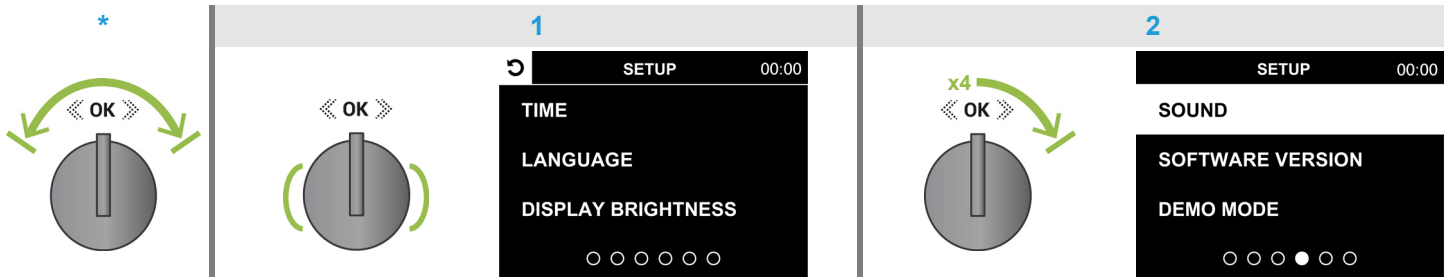


5.1 Using the menu items on the **SETUP** screen

5.1.1 "TIME"

This **menu item** is for setting the current time displayed **at the top right** in all screens; proceed as shown in the **example** below.

Turn the **control knob** 1 click *to the right* to select the "TIME" item, **illuminating** it (white background, fig. 1); **press** the knob to enter the **TIME** screen. The "HOURS/h" field is already active (fig. 2) and can be **set** by turning the **control knob** several clicks *to the right or left* to increase or decrease the **value**; **press** the knob to switch to the "MINUTES/m" field (fig. 3) to set the **value** as described above. Then **press** the knob to confirm and return to the **SETUP** screen with the "TIME" item illuminated (fig. 4); to exit the screen, turn the **control knob** 1 click *to the left* to select the icon  (and illuminate it  fig. 5). Then **press** the knob to return to the **main menu**, which displays the set **current time** (fig. 6).

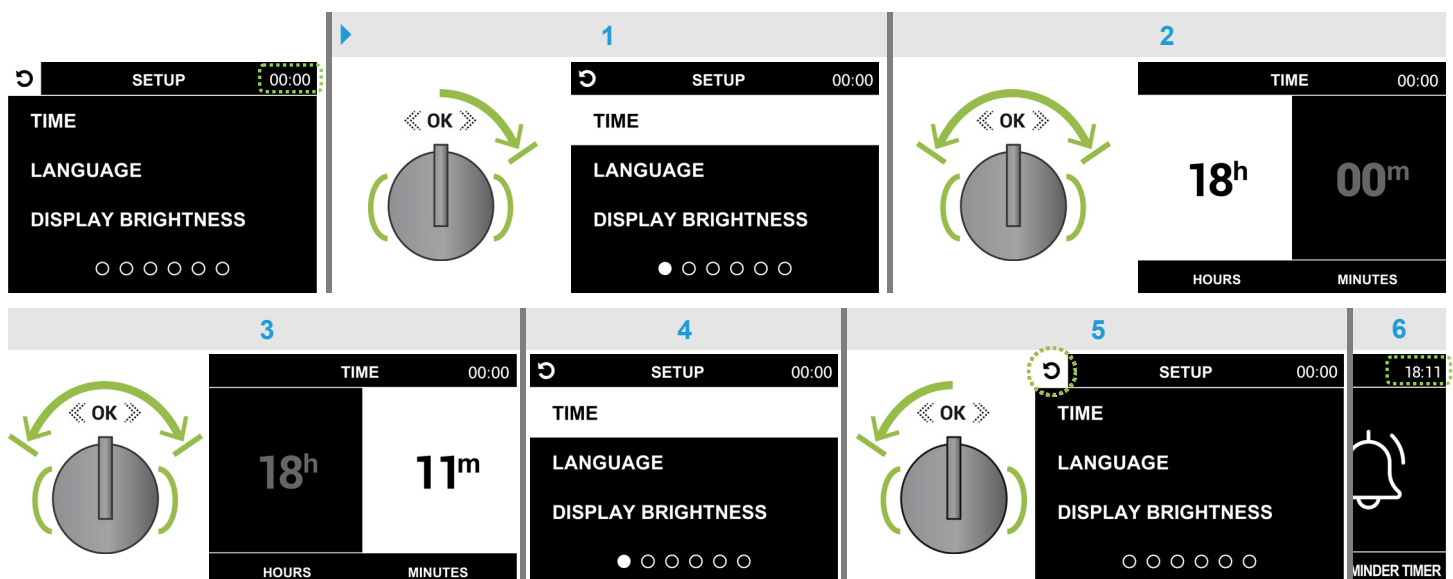


Note: after approximately **3 minutes** of inactivity, the **steel** logo will be displayed (see section 5.2 page 36).



5.1.2 “LANGUAGE”

This **menu item** is for setting the programmer display language; see the figures below for an example with English.


Turn the **control knob** **2** *clicks to the right* to select the “LANGUAGE” item, **illuminating** it (white background, fig. 1); **press** the knob **to enter** the LANGUAGE screen. Then turn the **control knob** *several clicks to the right* to **illuminate** one of the **items** in the desired language; **press** the knob **to confirm** the illuminated item (fig. 2). The **SETUP** screen is displayed with “TIME” item illuminated (fig. 3); **to exit** the screen, turn the **control knob** **1** *click to the left* to select the icon  (and illuminate it , fig. 4). Then **press** the knob to return to the **main menu** (fig. 5).

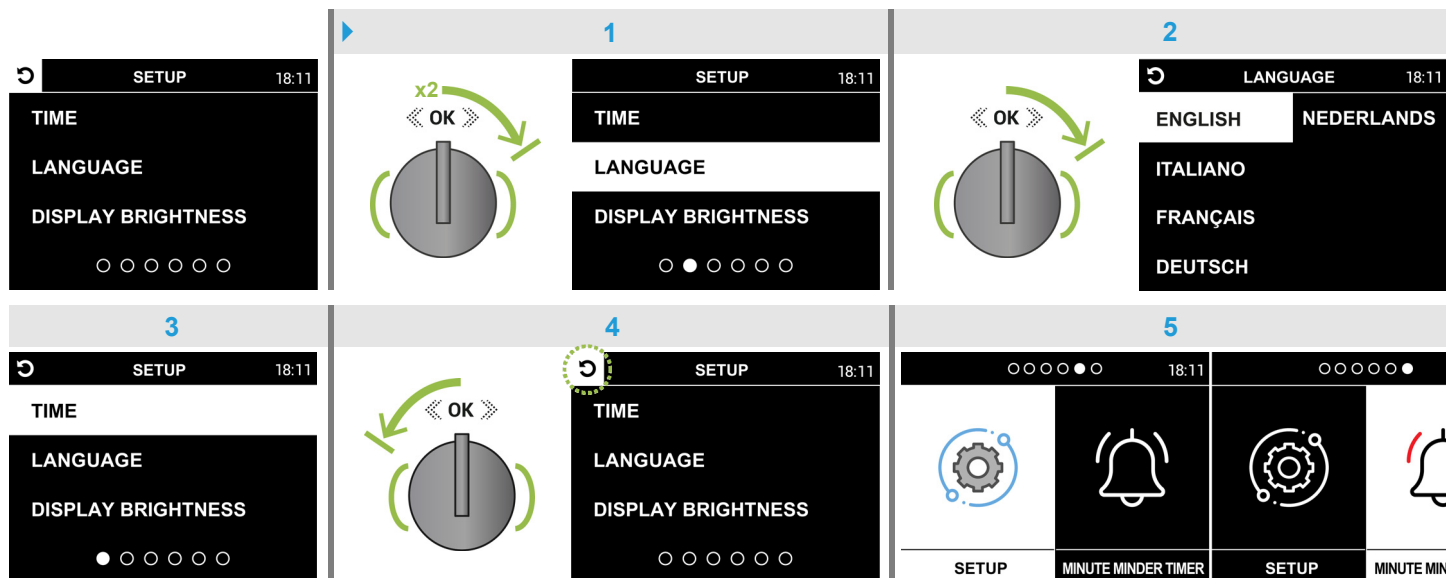

5.1.3 “DISPLAY BRIGHTNESS”

This **menu item** is for setting the display brightness, as follows.

Turn the **control knob** **3** *clicks to the right* to select the “DISPLAY BRIGHTNESS” item, **illuminating** it (white background, fig. 1); **press** the knob **to enter** the BRIGHTNESS screen. The adjustment field is already active (fig. 2) and can be **set** by turning the **control knob** *several clicks to the right or left* to increase or decrease the brightness. Then **press** the knob **to confirm** and return to the **SETUP** screen with the “TIME” item illuminated (fig. 3); **to exit** the screen, turn the **control knob** **1** *click to the left* to select the icon  (and illuminate it , fig. 4). Then **press** the knob to return to the **main menu** (fig. 5).

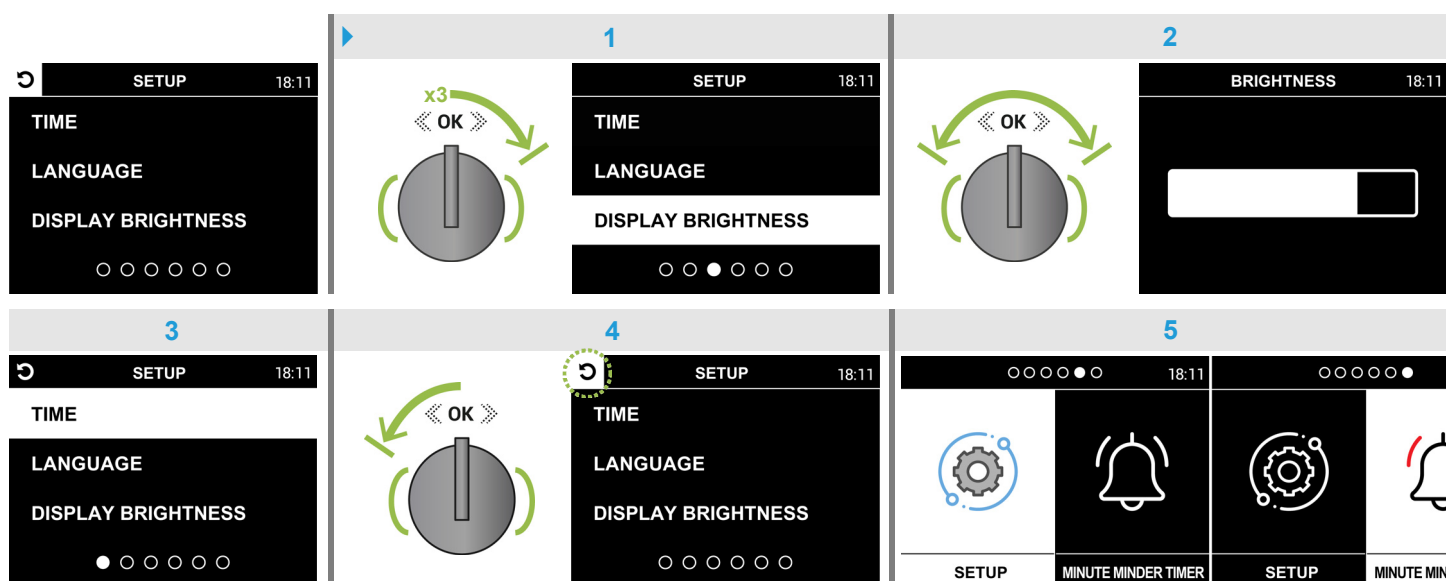




5.1.4 “SOUND”

This **menu item** is for setting the beeper volume, as follows.


Turn the **control knob** **4** *clicks to the right* to select the “**SOUND**” **item**, **illuminating** it (white background, fig. 1); **press** the knob *to enter* the **SOUND** screen. The adjustment field is already **audible** and active (fig. 2) and can be **set** by turning the **control knob** *several clicks to the right or left* to increase or decrease the volume. Then **press** the knob *to confirm* and return to the **SETUP** screen with the “**TIME**” **item** illuminated (fig. 3); *to exit* the screen, turn the **control knob** **1** *click to the left* to select the icon  (and illuminate it , fig. 4). Then **press** the knob to return to the **main menu** (fig. 5).

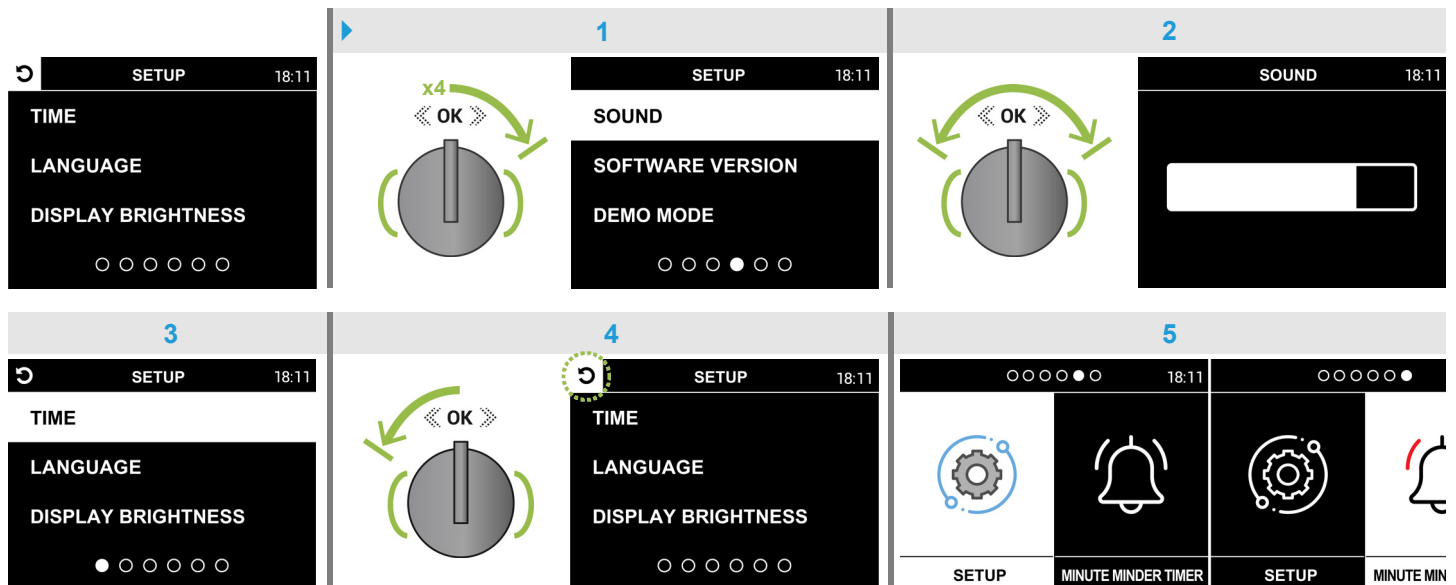

5.1.5 “SOFTWARE VERSION”

This **menu item** is only available to the technician and the **SOFTWARE VERSION** screen is not active for the user.

*To exit the **SOFTWARE VERSION** screen** **press** the **control knob** to return to the **SETUP** screen with the “**TIME**” **item** illuminated (fig. 1); *to exit the screen*, turn the **control knob** **1** *click to the left* to select the icon  (and illuminate it , fig. 2). Then **press** the knob to return to the **main menu** (fig. 3).

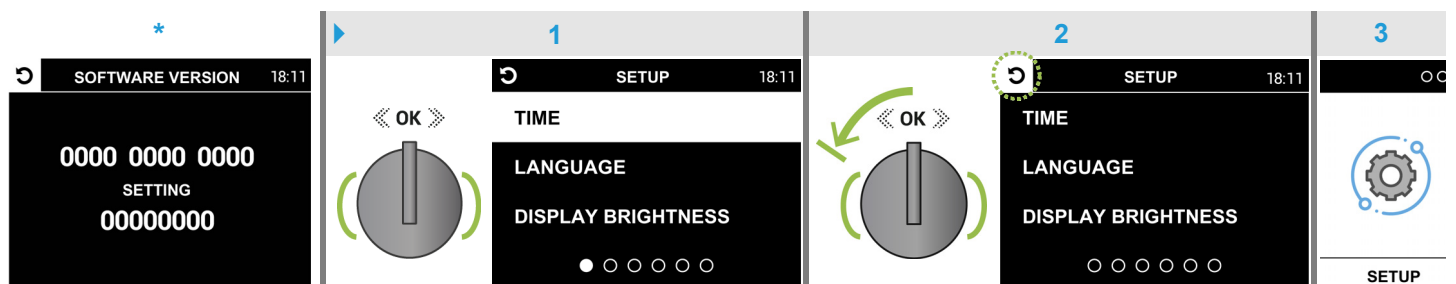




5.1.6 “DEMO MODE”

This **menu item** is only available to the technician and the **DEMO MODE** screen is not active for the user; entering numbers in this screen has no effect and the oven will continue to work normally.

To exit the **DEMO MODE** screen*, **press** the **control knob 3 consecutive times** to **illuminate** the last digit in the requested code (fig. 1); **press** the knob again to **cancel** the 4 digits in the code (fig. 2). Then **press** the knob to return to the **SETUP** screen with the “**TIME**” item illuminated (fig. 3); to exit the screen, turn the **control knob 1 click to the left** to select the icon  (and illuminate it , fig. 4). Then **press** the knob to return to the **main menu** (fig. 5).

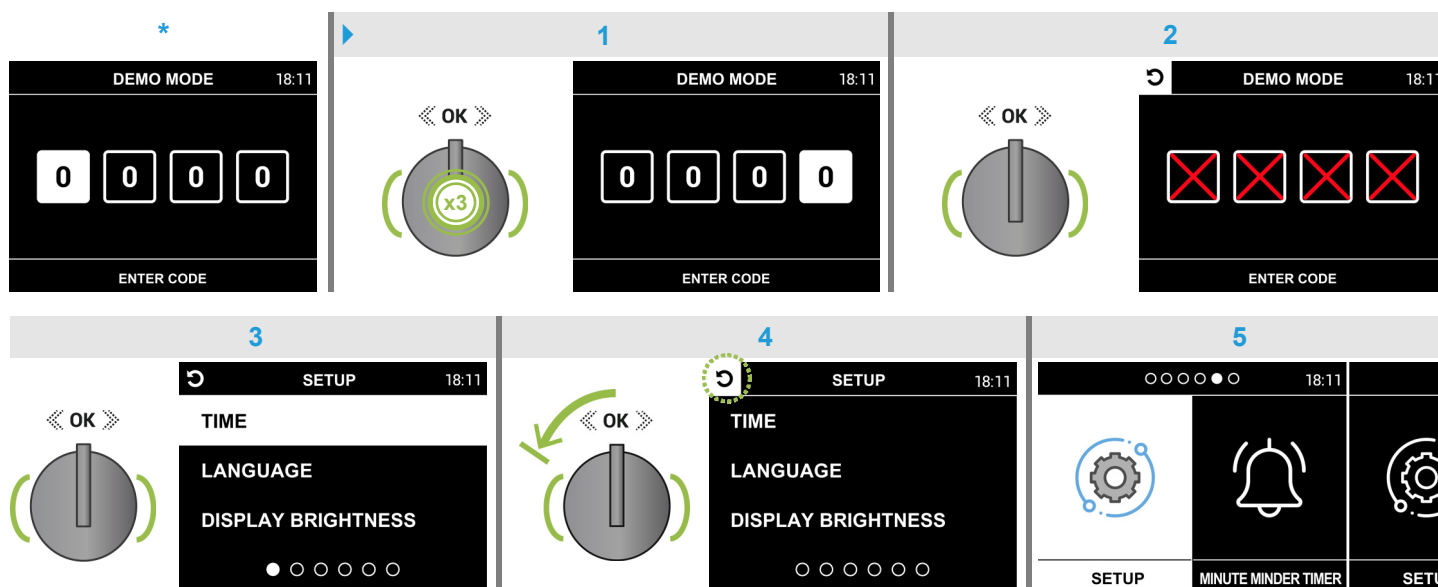

5.2 “Standby” mode



After approximately **3 minutes** of inactivity, the **steel** logo will be displayed.

After **24 hours** of inactivity, the programmer will **automatically** enter “standby” mode (black screen).

Press the **control knob** to display the **main menu** screen again (page 5).






6. "MINUTE MINDER TIMER" MODE (independent)



MINUTE MINDER TIMER

To enter "MINUTE MINDER TIMER" mode, go to the **main menu** and proceed as follows:


- turn the **control knob** several clicks *to the right or left** until "MINUTE MINDER" is illuminated (white background, as shown in the adjacent figure);
- **press** the **control knob** to enter the **MINUTE MINDER** screen;
▶ follow the instructions in section 6.1 to **set** the parameters in the screen.

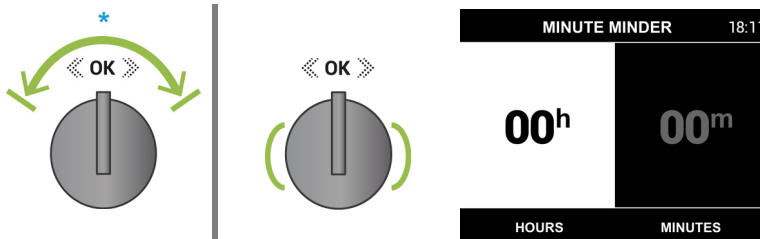

6.1 Using the **MINUTE MINDER** screen

This **mode** enables a timer with beeper to be used, without interfering with the oven, **provided it is not already set** in the **start COOKING** screens (sections 1.4, 2.3, 3.2.1, 3.4, 4.3) or the **MEAT PROBE IN** screen (section 1.6 page 16). Proceed as shown in the **example** below.

The "HOURS/h" field is already active (white background, fig. 1) and can be **set** by turning the **control knob** several clicks *to the right or left* to increase or decrease the **value**; **press** the knob to switch to the "MINUTES/m" field (fig. 2) to set the **value as described above**. Then **press** the knob to confirm and return to the **main menu** (fig. 3). The timer will **start** with the programmed countdown*.

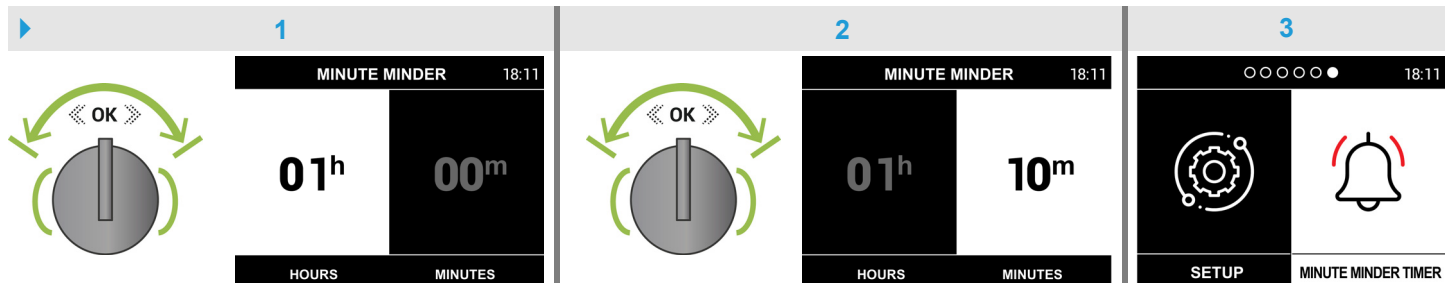

***Note:** the time *remaining* **cannot** be controlled in this **mode** (to **exit** the **MINUTE MINDER** screen, **press** the **control knob** **2 consecutive times**).

At the **end** of the programmed time a **beeper** sounds for approximately **2 minutes**. **Press** the **control knob** to deactivate it.

www.steel-cucine.com



STEEL SRL

Via dell'Agricoltura, 21
41012 Carpi (Mo) - Italy
T. +39 059 645180
steel@steel-cucine.com